



JTSS-3200X **PANEL SAW**

JTSS-3200X-T...10000047XT...3~400V, 50Hz

PARTS LIST

JPW (Tool) AG

Tämperlistrasse 5

CH-8117 Fällanden

Switzerland

Phone +41 44 806 47 48

Fax +41 44 806 47 58

www.jettools.com

P-10000047XT

2014-07

Cabinet and Table assembly Parts List for The JTSS-3200X Panel Saw

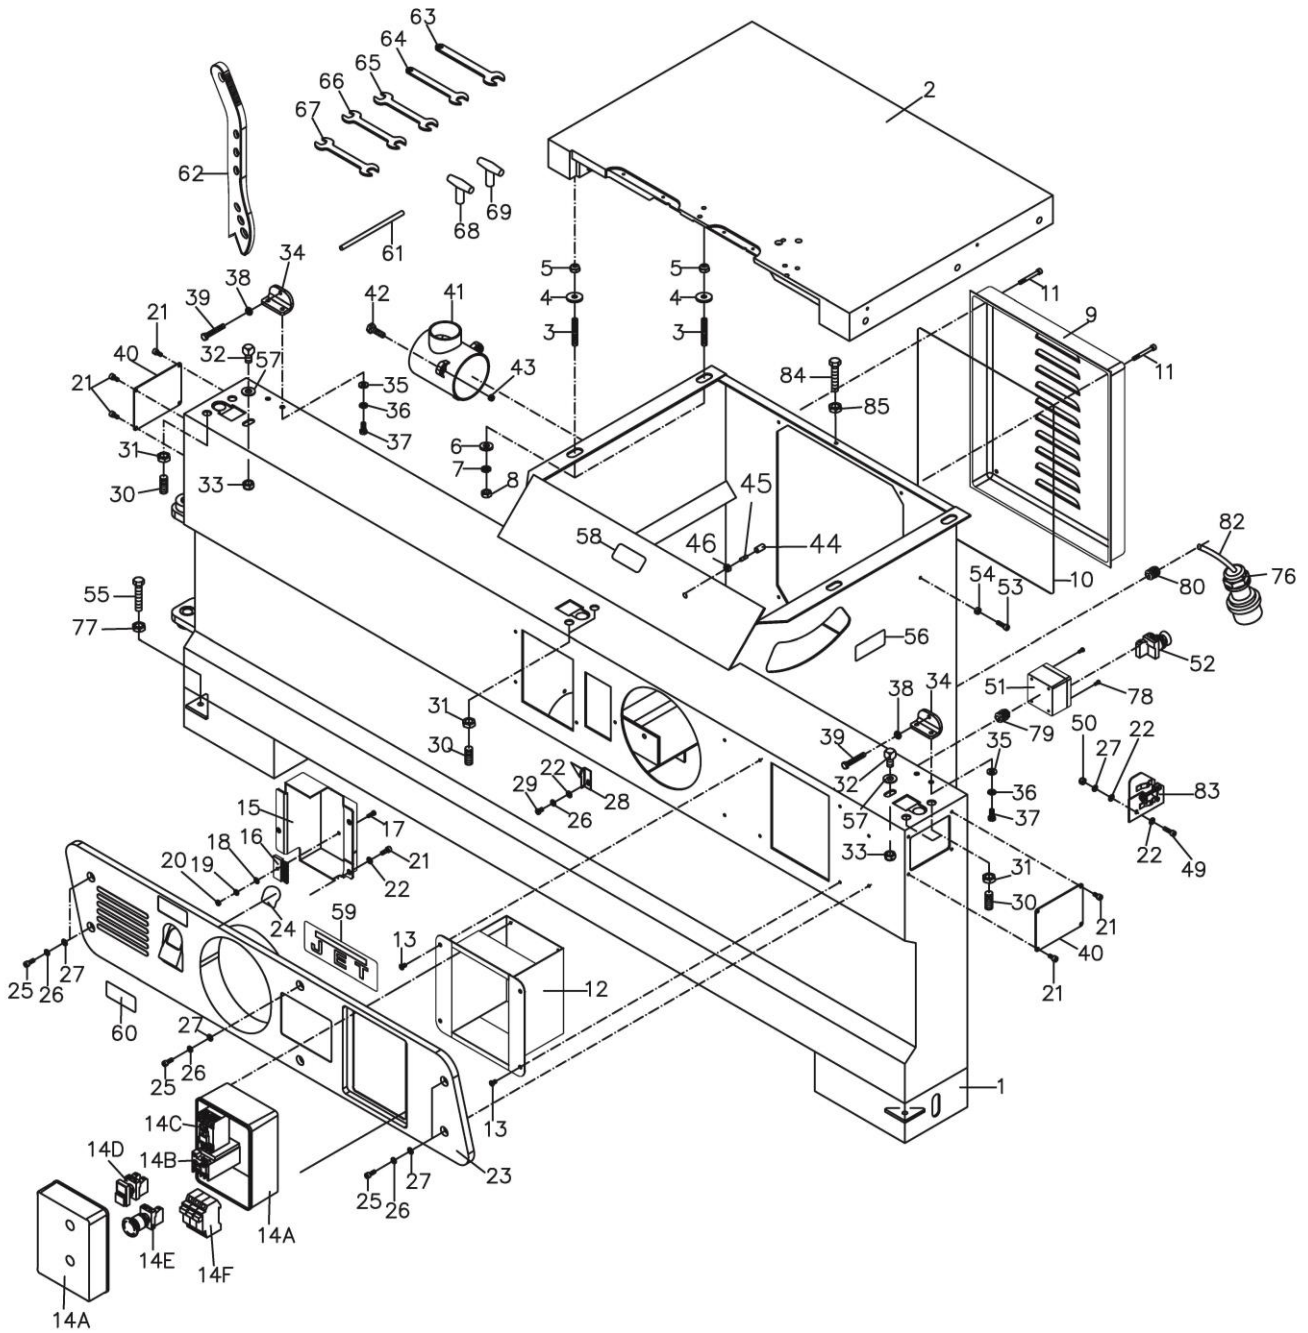


Table and Cabinet Assembly

Index No.	Part No.	Description	Size	Qty.
1	JTSS3200X-101A	Cabinet (serial #14090038 and higher)		1
2	JTSS3200X-102A	Main Table (serial #14090038 and higher)		1
3	JTSS3200X-103A	Set Screw (serial #14090038 and higher)	M12x70	4
4	TS-2360121	Flat Washer (serial #14090038 and higher)	M12	4
5	TS-2342121	Nylon Nut (serial #14090038 and higher)	M12	4
6	JTSS3200X-106	Flat Washer (serial #14080022 and higher)		4
7	TS-2361121	Lock Washer (serial #14090038 and higher)	M12	4
8	TS-2342121	Nylon Nut (serial #14090038 and higher)	M12	4
9	JTSS3000-115	Motor Cover		1
10	JTSS3200X-110	Foam Strip		1
11	TS-1503131	Socket Head Cap Screw	M6x60	4
12	JTSS3200X-112	Switch Box		1
13	TS-2246102	Socket Head Button Screw	M6x10	4
14	JTSS3200X-114AE	Magnetic Switch Assembly (item 14 - 14G)	5.5Hp, 400V, 3Ph	1
14A	JTSS3200X-114A	Control Box		1
14B	JTSS3200X-114ORAE	Overload Relay	5.5Hp, 400V, 3Ph	1
14C	JTSS3200X-114CSAE	Contact Switch	400V, 3Ph	1
14D	JTSS3200X-114D	ON / OFF Switch with LED light		1
14E	JTSS3200X-114E	Emergency Switch		1
14F	JTSS3200X-114F	Fuse Seat Assembly		1
14G	JTSS3200X-114G	Fuse (not Shown)	12A	3
14H	JTSS3200X-114H	LED Light (not Shown)		1
15	JTSS3000-131	Scale Dust Cover		1
16	JTSS3200-166	Brush		1
17	TS-1533062	Pan Head Screw	M5x20	1
18	TS-1550031	Flat Washer	M5	1
19	TS-2361051	Lock Washer	M5	1
20	TS-1540031	Hex Nut	M5	1
21	TS-2246122	Socket Hand Button Screw	M6x12	11
22	TS-1550041	Flat Washer	M6	8
23	JTSS3200X-123	Cover		1
24	JTSS3000-111	Scale Plate		1
25	TS-1503041	Socket Head Cap Screw	M6x14	6
26	TS-2361061	Lock Washer	M6	7
27	TS-1550041	Flat Washer	M6	8
28	JTSS3000-134	Pointer		1
29	TS-1534032	Pan Head Screw	M6x10	1
30	JTSS3000-121N	Socket Set Screw	M14x35	6
31	JTSS3000-122	Hex Nut	M14	6
32	JTSS3000-123	Positioning Screw		2
33	TS-2342121	Nylon Nut	M12	2
34	JTSS3200X-134	Stop Bracket		2
35	TS-0680032	Flat Washer	M8	4
36	TS-0720081	Lock Washer	M8	4
37	TS-1490021	Hex Cap Bolt	M8x16	4
38	TS-2311081	Hex Nut	M8	2

Index No.	Part No.	Description	Size	Qty.
39	TS-1490091	Hex Cap Bolt	M8x50	2
40	JTSS3000-113	Adjustment Bolt Cover		2
41	JTSS3200X-141	Dust Chute		1
42	TS-0050021	Hex Cap Bolt	1/4"-20x5/8"	3
43	TS-0640071	Nylon Nut	1/4"-20	3
44	JTSS3200-165	Stop Block		1
45	TS-1524041	Set Screw	M8x16	1
46	TS-1541031	Nylon Nut	M8	1
49	TS-1503051	Socket Head Cap Screw	M6x20	2
50	TS-1541021	Nylon Nut	M6	2
51	JTSS3200X-151	Switch Box		1
52	JTSS3200X-152	Emergency Switch		
53	TS-1503061	Socket Head Cap Screw	M6x25	1
54	TS-1540041	Hex Nut	M6	1
55	TS-1492061	Hex Cap Bolt	M12x60	4
56	JTSS3200X-156	Blade Raise Label		1
57	TS-2360121	Flat Washer	M12	2
58	JTSS3200X-158	Label		1
59	JET-138	JET nameplate		1
60	JTSS3000-133	Blade Angle Label		1
61	JTSS1500-151	Arbor index pin	∅ 8mm	1
62	JTSS1500-150	Push Stick		1
63	JTSS1500-152	Open End Wrench	13mm	1
64	JTSS1500-153	Open End Wrench	19mm	1
65	JTSS1500-154	Open End Wrench	10-12mm	1
66	JTSS1500-155	Open End Wrench	14-17mm	1
67	JTSS1500-156	Open End Wrench	22-24mm	1
68	JTSS1500-157	T-style Allen Wrench	4mm	1
69	JTSS3200X-169	T-style Allen Wrench	5mm	1
70	JTSS3200X-170	T-style Allen Wrench (not shown)	6mm	1
71	JTSS3200X-171	L style Allen Wrench (not shown)	2mm	1
72	TS-152704	L style Allen Wrench (not shown)	3mm	1
73	TS-152705	L style Allen Wrench (not shown)	4mm	1
74	TS-152706	L style Allen Wrench (not shown)	5mm	1
75	TS-152707	L style Allen Wrench (not shown)	6mm	1
76	JTSS3000-129	Power Plug	3Ph	1
77	TS-2311121	Hex Nut	M12	4
78	JTSS3200X-178	Pan Head Screw	M4X15	2
79	JML-70E	Strain Relief	PG9	2
80	JWL1642-196E	Strain Relief	PG13.5	3
82	JTSS3200X-182	Power Cord		1
83	JTSS2500-180	Safety Guard		1
84	TS-1510051	Hex Cap Bolt	M6x50	1
85	TS-1540041	Hex Nut	M6	1

Parts List For The JTSS-3200X Panel Saw Table Extension Assembly


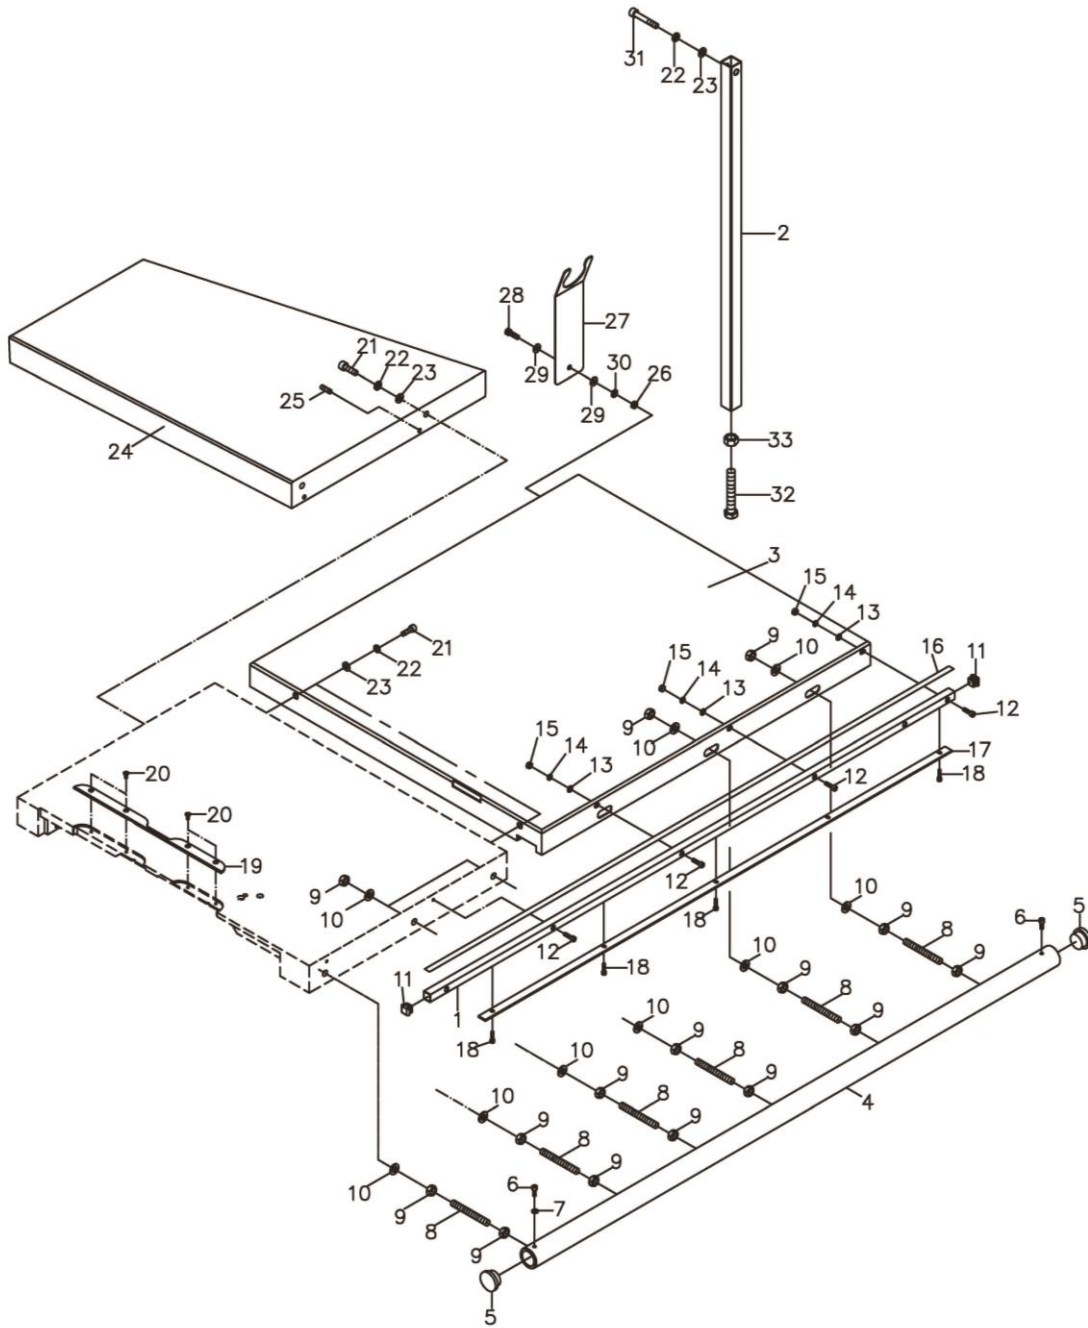


Table Extension Assembly

Index No.	Part No.	Description	Size	Qty.
1.....	JTSS3000-547	Gear Base		1
2.....	JTSS3200X-202	Extension Table Support		1
3.....	JTSS3000-544	Extension Table		1
4.....	JTSS3000-530	Rail		1
5.....	JTSS1500-137	Rubber Plug		2
6.....	TS-1503031	Socket Head Cap Screw	M6x12	2
7.....	JTSS1500-142	Eccentric Washer		1
8.....	JTSS1500-127	Screw	M12x100	6
9.....	TS-2311121	Hex Nut	M12	18
10.....	TS-2360121	Flat Washer	M12	12
11.....	JTSS1500-115	Gear Base Cover		2
12.....	TS-1503051	Socket Head Cap Screw	M6x20	8
13.....	TS-1550041	Flat Washer	M6	10
14.....	TS-2361061	Lock Washer	M6	10
15.....	TS-1540041	Hex Nut	M6	5
16.....	JTSS3000-539	Scale		1
17.....	JTSS3000-537	Gear Strip		1
18.....	TS-1502011	Socket Head Cap Screw	M5x8	5
19.....	JTSS3200X-219	Table Insert		1
20.....	JTSS1500-134	Flat Head Screw	M5x10	4
21.....	TS-1505031	Socket Head Cap Screw	M10x25	4
22.....	TS-2361101	Lock Washer	M10	5
23.....	TS-1550071	Flat Washer	M10	5
24.....	JTSS1500	Extension Table		1
25.....	TS-1524061	Socket Set Screw	M8x25	2
26.....	TS-1541031	Nylon Nut	M8	1
27.....	JTSS1500-110	Hose Support		1
28.....	TS-1504051	Socket Head Cap Screw	M8x25	1
29.....	TS-1550061	Flat Washer	M8	2
30.....	TS-2361081	Lock Washer	M8	1
31.....	TS-1491101	Hex Cap Bolt	M10x60	1
32.....	JTSS3200X-232	Adjustment level		1
33.....	TS-0570031	Hex Nut	3/8"	1

Parts List For The JTSS-3200X Panel Saw Motor and Blade Guard Assembly

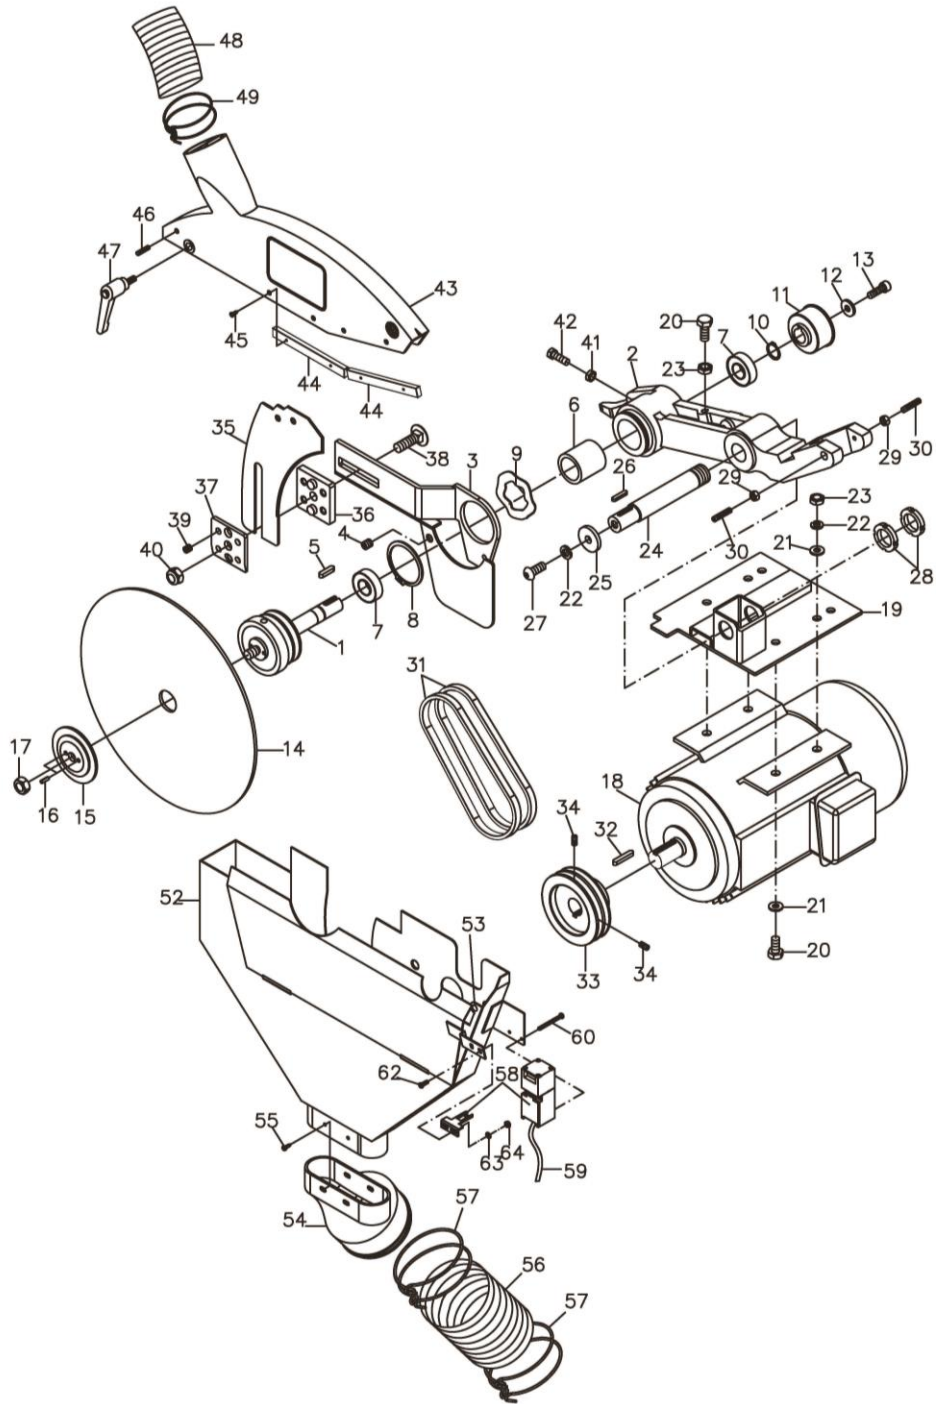


Motor and Blade Guard Assembly

Index No.	Part No.	Description	Size	Qty.
1	JTSS1500-633	Blade Arbor		1
2	JTSS3200X-602	Rotate Part		1
3	JTSS1500-620	Knife Base		1
4	JTSS3200X-604	Nylon Screw	M12-1.75x12	1
5	JTSS1500-322	Key	6x6x20	1
6	JTSS3200X-606	Spacer		1
7	VV-6004ZZ	Ball Bearing	6004VV	2
8	JTSS3200X-608	S-Ring	S60	1
9	JTSS3200X-609	Wave Washer		1
10	JTSS3200X-610	S-Ring	S20	1
11	JTSS1500-321	Pulley		1
12	TS-1550061	Flat Washer	M8	1
13	TS-1504041	Socket Head Cap Screw	M8x25	1
14	JTSS1500-634	Blade		1
15	JTSS1500-636	Flange		1
16	JTSS1500-635	Spring Pin	φ 4x12	2
17	JTSS1500-637	Hex Nut	M12x1.75P(LT)	1
18	JTSS3200X-618AE	Motor	5.5Hp, 3Ph, 400V	1
	JTSS3200X-MBA	Motor Break Assembly (not shown)		1
	JTSS3200X-BRMB	Bridge Rectifier for Motor Break (not shown)		1
19	JTSS1500-614	Motor Plate		1
20	TS-1491041	Hex Cap Bolt	M10x30	5
21	TS-1550071	Flat Washer	M10	8
22	TS-2361101	Lock Washer	M10	5
23	TS-1540071	Hex Nut	M10	5
24	JTSS3200X-624	Shaft		1
25	TS-1550071	Flat Washer	M10	1
26	JTSS3200X-626	Key	5x5x25	1
27	TS-2249252	Socket Head Button Screw	M10x25	1
28	JTSS1500-613	Bearing Nut	M25-1.5P	2
29	TS-1540041	Hex Nut	M6	2
30	JTSS3200X-630	Set Screw	M6x30	2
31	JTSS1500-622	Belt	3VX-265	2
32	JTSS1500-603	Key	6x6x30	1
33	JTSS1500-604	Pulley		1
34	TS-2276081	Socket Set Screw With Nylon	M6x8	4
35	JTSS3200X-635	Riving Knife		1
36	JTSS1500-629	Riving Knife Cover		1
37	JTSS1500-630	Cover Fix Block		1
38	JTSS1500-619	Carriage Bolt	M12x35	1
39	TS-1524011	Socket Set Screw	M8x8	4
40	JTSS1500-632	Lock Nut	M12	1
41	TS-2311081	Hex Nut	M8	1
42	TS-1524061	Set Screw	M8x25	1
	JTSS3200X-BGA	Blade Guard Assembly (Item 43 - 46)		1
43	JTSS3200X-643	Saw Blade Guard		1
44	JTSS3200X-644	Board		4
45	JTSS3200X-645	Screw	M3x10	8

Index No.	Part No.	Description	Size	Qty.
46.....	JTSS1500-624	Spring Pin	ϕ 6x30	1
47.....	JTSS3200X-647	Lock Handle		1
48.....	JTSS1500-648	Dust tube dia. 60mm.....		1
49.....	JTSS3200X-649	Clamping.....	60mm	1
52.....	JTSS3200X-652	Dust Cover		1
53.....	JTSS1500-647	Magnet		1
54.....	JTSS3200X-654	Dust Hose Adaptor		1
55.....	JTSS3200X-655	Machine Screw	M5x10	4
56.....	JTSS1500-649	Dust tube dia. 100mm.....		1
57.....	JTSS3200X-657	Hose Clamping		2
58.....	JTSS1500-639	Limit Switch.....		1
59.....	JTSS3200X-659	Limiter Switch Cord.....		1
60.....	JTSS1500-640	Flat Head Screw	M4x40	2
62.....	TS-1532032.....	Pan Head Screw	M4x10	2
63.....	TS-1550021.....	Flat Washer.....	M4	2
64.....	TS-1540021.....	Hex Nut	M4	2
65.....	JTSS3200X-665	Motor Cord		1

Parts List For The JTSS-3200X Panel Saw Turning Assembly

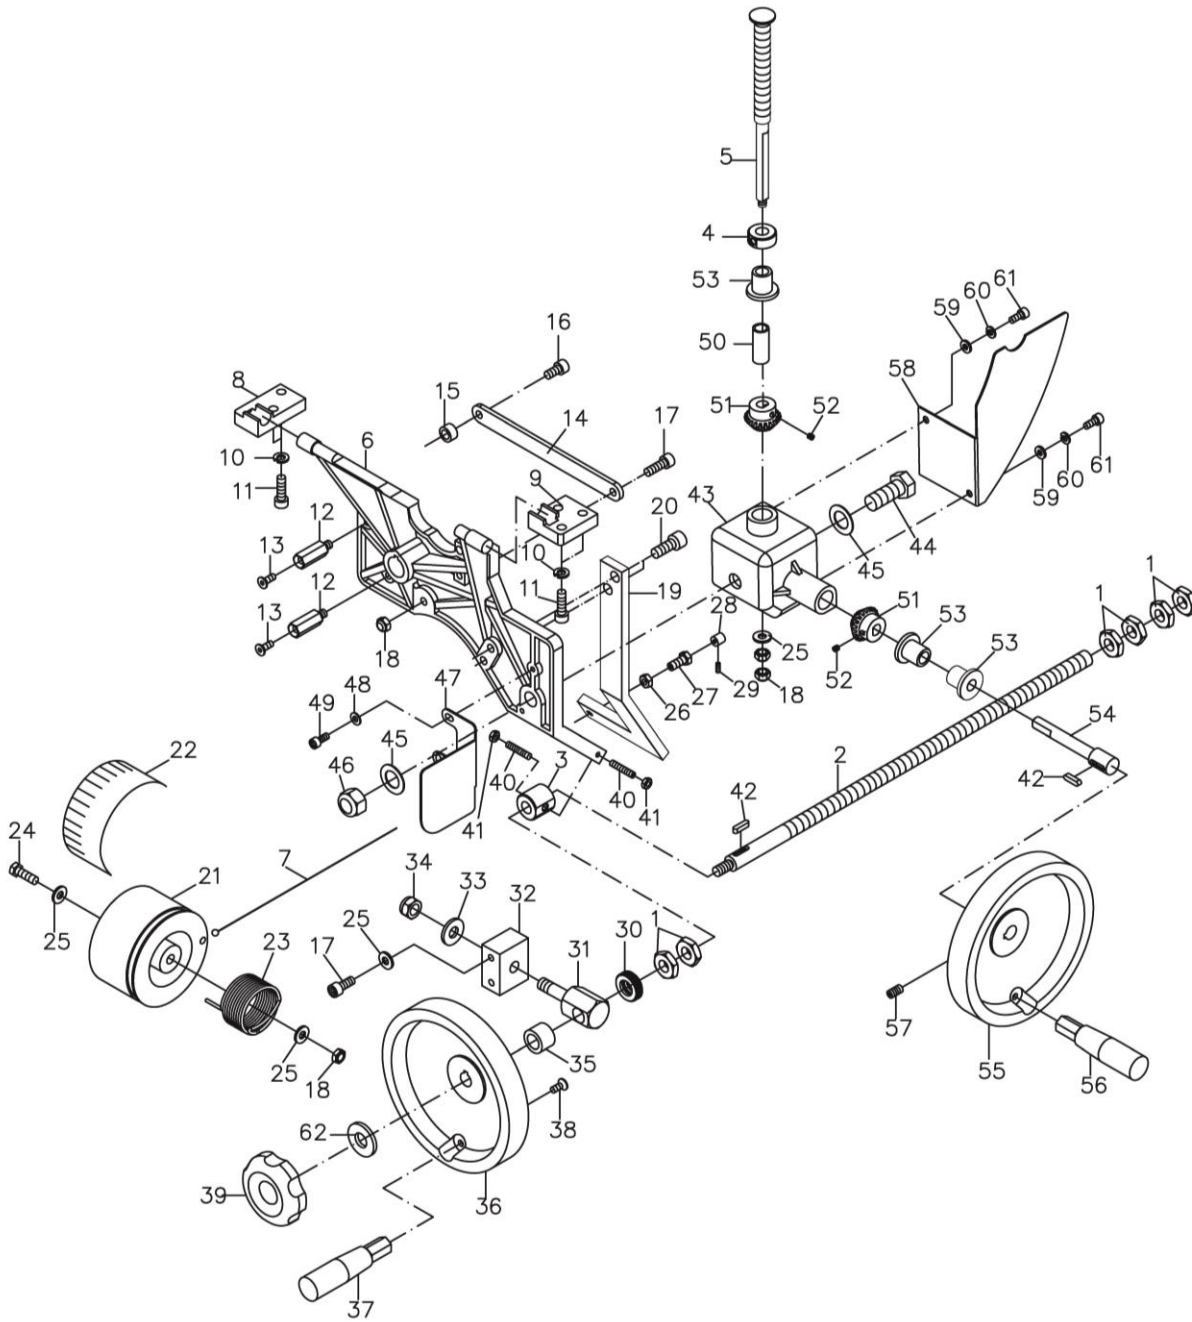


Turning Assembly

Index No.	Part No.	Description	Size	Qty.
1	JTSS3200X-401	Hex Nut		6
2	JTSS3200X-402	Lead Screw		1
3	JTSS3200X-403	Square Nut		1
4	JTSS3200X-404	Square Nut		1
5	JTSS3200X-405	Worm		1
6	JTSS3200X-406	Turning		1
7	JTSS1500-443	Steel Rope		1
8	JTSS3200X-408	Rotate Part Fix		1
9	JTSS3200X-409	Rotate Part Fix		1
10	TS-2361081	Lock Washer	M8	5
11	TS-1504041	Socket Head Cap Screw	M8x20	5
12	JTSS3200X-412	Cover Sport		3
13	TS-1515011	Socket Head Flat Screw	M8x15	3
14	JTSS1500-426	Crank		1
15	JTSS1500-427	Pulley Pad		
16	TS-1504031	Socket Head Cap Screw	M8x16	1
17	TS-1504061	Socket Head Cap Screw	M8x30	3
18	TS-1540061	Hex Nut	M8	4
19	JTSS1500-430	Gather Shaft		1
20	TS-1505031	Socket Head Cap Screw	M10x25	2
21	JTSS1500-448	Steel Rope Wheel		1
22	JTSS3200X-422	Scale Label		1
23	JTSS1500-447	Spring		1
24	JTSS1500-449	Hex Cap Bolt	M8x75	1
25	TS-1550061	Flat Washer	M8	4
26	TS-2311081	Hex Nut	M8	1
27	JTSS1500-429	Gather Bolt		1
28	JTSS1500-442	Steel Rope Jacket		1
29	TS-1501031	Socket Set Screw	M4x10	1
30	JTSS3200X-430	Thrust Bearing		1
31	JTSS3200X-431	Fix Arbor		1
32	JTSS1500-451	Fix Arbor Nut		1
33	TS-2360121	Flat Washer	M12	1
34	TS-2342121	Lock Nut	M12	3
35	JTSS3200X-435	Bushing		1
36	JTSS3200X-436	Hand Wheel		1
37	JTSS3200X-437	Handle (Includes #38)		1
38	TS-1514011	Socket Head Flat Screw	M6x12	1
39	JTSS1500-401	Knob Nut	M10x1.5	1
40	JTSS3200X-440	Set Screw	M6x30	2
41	TS-1541021	Hex Nut	M6	2
42	JTSS3200X-442	Key	5x5x20	2
43	JTSS1500-416	Gear Box		1
44	JTSS1500-417	Hex Cap Bolt	M16x2.0Px40	1
45	JTSS3200X-445	Fiber Washer		2
46	JTSS1500-423	Lock Nut	M16	1
47	JTSS1500-439	Cover		1

Index No.	Part No.	Description	Size	Qty.
48.....	TS-1550031.....	Flat Washer.....	M5.....	2
49.....	TS-1502021.....	Socket Head Cap Screw.....	M5x10.....	2
50.....	JTSS3200X-450.....	Bushing.....		1
51.....	JTSS3200X-451.....	Gear.....		2
52.....	TS-1523011.....	Socket Set Screw.....	M6x6.....	2
53.....	JTSS1500-418.....	Copper Sleeve.....		3
54.....	JTSS1500-412.....	Handle Wheel Arbor.....		1
55.....	JTSS3200X-455.....	Handwheel.....		1
56.....	JTSS3200X-456.....	Handle.....		1
57.....	TS-1524031.....	Set Screw.....	M8x12.....	1
58.....	JTSS1500-421.....	Upper Cover.....		1
59.....	TS-1550041.....	Flat Washer.....	M6.....	2
60.....	TS-2361061.....	Spring Washer.....	M6.....	2
61.....	TS-1503041.....	Socket Head Cap Screw.....	M6x14.....	2
62.....	TS-1550071.....	Flat Washer.....	M10.....	1


Parts List For The JTSS-3200X Panel Saw Scoring Assembly

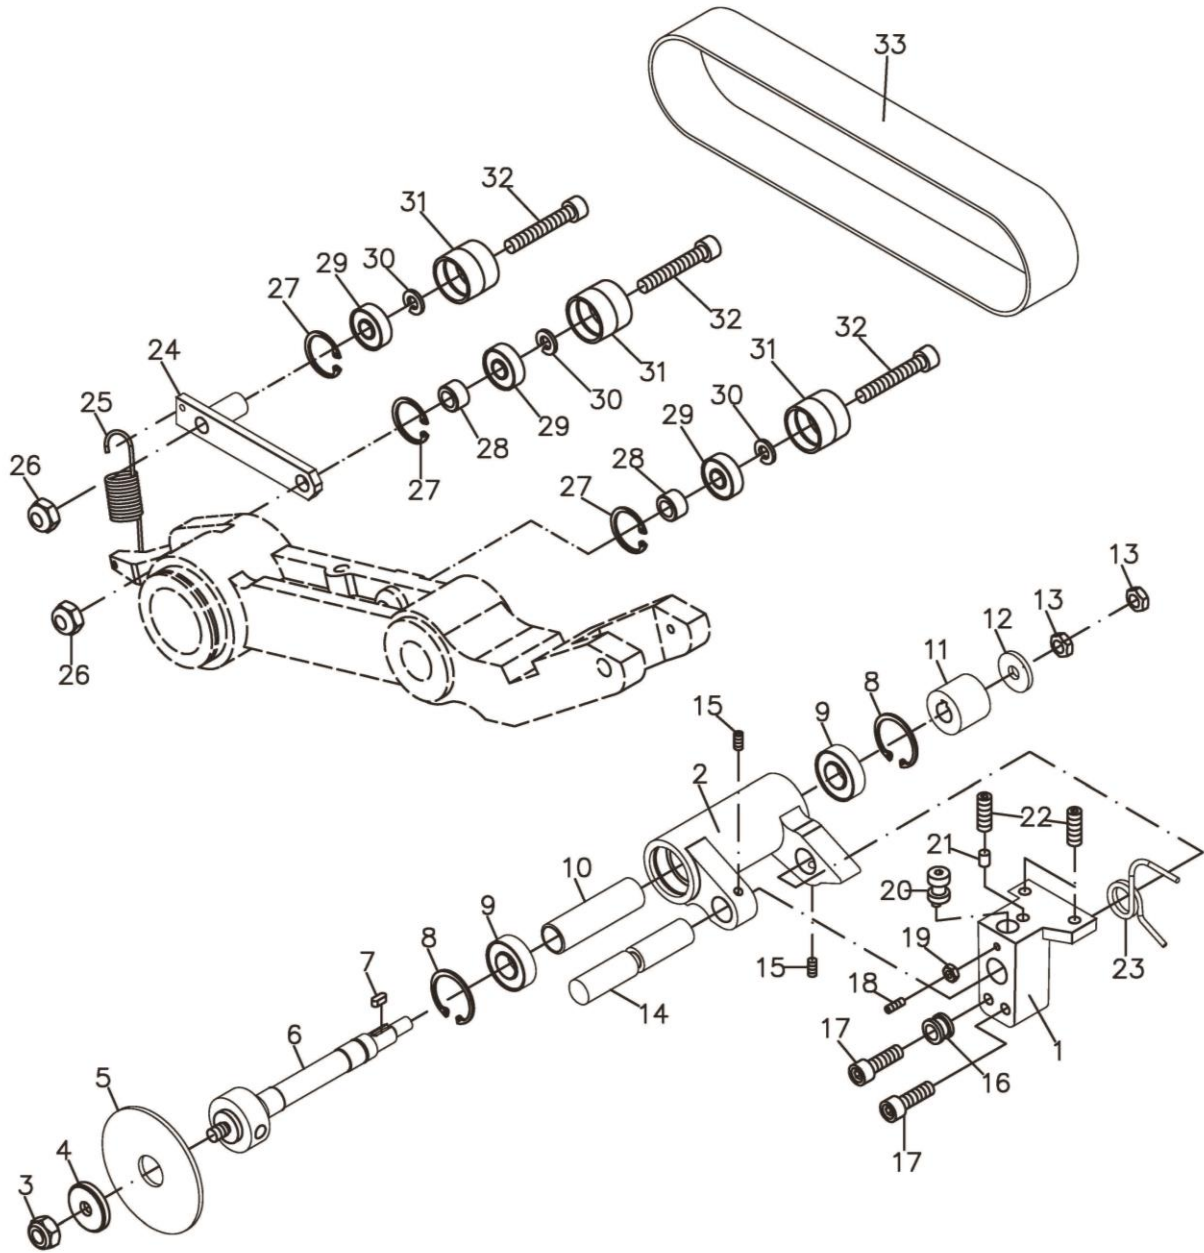

Scoring Assembly

Index No.	Part No.	Description	Size	Qty.
1.....	JTSS1500-304	Link Shaft Fix Base		1
2.....	JTSS3200X-325	Blade Link Shaft.....		1
3.....	JTSS1500-331	Nylon Nut	M8x1.25P	1
4.....	JTSS1500-330	Flange		1
5.....	JTSS1500-329	Scoring Blade.....	ø80/ ø20mm.....	1
6.....	JTSS1500-328E.....	Blade Arbor		1
7.....	JTSS1500-327	Key.....	4x4x10	1
8.....	JTSS1500-310	Ring.....	RTW-32.....	2
9.....	BB-6002VV.....	Ball Bearing.....	6002VV	2
10.....	JTSS3200X-410	Bushing		1
11.....	JTSS1500-311	Blade Pulley		1
12.....	TS-1550061.....	Flat Washer.....	M8	1
13.....	JTSS1500-313	Hex Nut	M8x1.25P (LT)	2
14.....	JTSS1500-324	Blade Link Shaft Arbor		1
15.....	TS-1523031.....	Set Screw.....	M6x10	2
16.....	JTSS1500-302	Sleeve		1
17.....	TS-1504071.....	Socket Head Cap Screw.....	M8x35	2
18.....	TS-1522031.....	Socket Set Screw	M5x10	1
19.....	TS-1540031.....	Hex Nut	M5	1
20.....	JTSS1500-305	Adjustment Screw		1
21.....	JTSS1500-335	Copper Bar.....		1
22.....	TS-1524061.....	Socket Set Screw	M8x25	3
23.....	JTSS1500-326	Spring.....		1
24.....	JTSS1500-332	Pulley Support.....		1
25.....	JTSS1500-333	Spring.....		1
26.....	JTSS1500-334	Nylon Nut	M10x1.5P	2
27.....	JTSS1500-320	Ring.....	RTW-26.....	3
28.....	JTSS1500-323	Pulley Pad.....		4
29.....	BB6000.....	Ball Bearing.....	6000	3
30.....	TS-2361081.....	Spring Washer	M8	3
31.....	JTSS1500-317	Pulley		3
32.....	TS-1504051.....	Socket Head Cap Screw.....	M8x25	2
33.....	JTSS1500-314N.....	Flat Belt.....		1
.....	JTSS3200X-CSA.....	Complete Scoring Assembly (Index # 1 - 24).....		1


Parts List For The JTSS-3200X Panel Saw Sliding Table Assembly

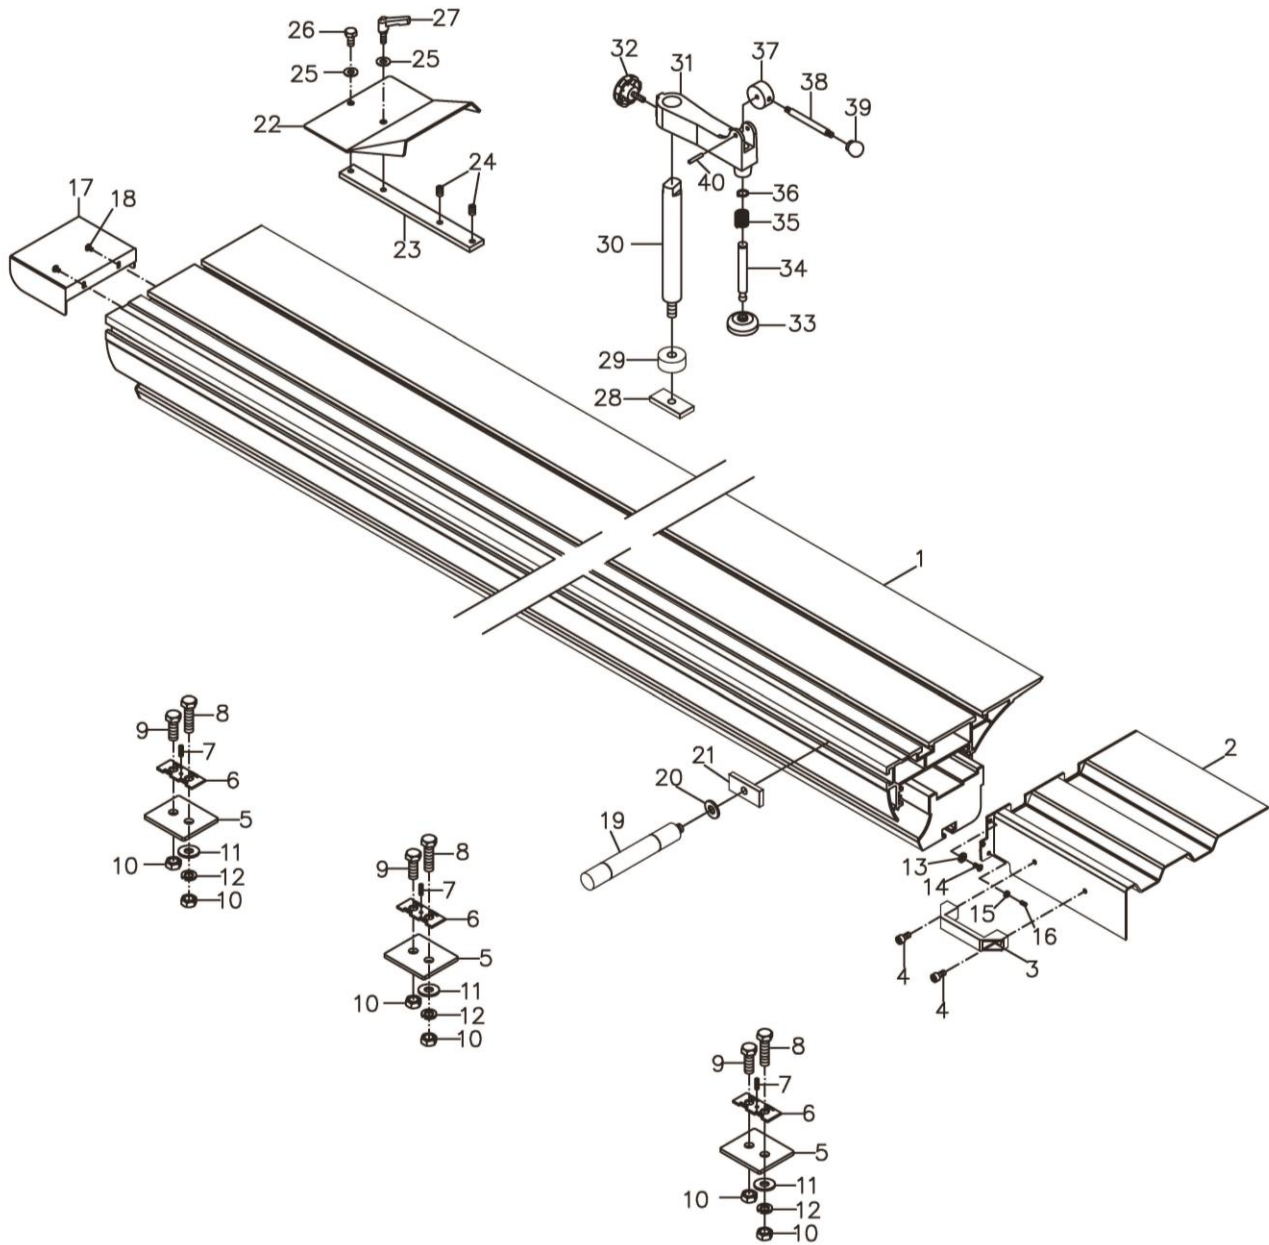

Sliding Table Assembly

Index No.	Part No.	Description	Size	Qty.
1	JTSS3200X-701	Sliding Table Assembly		1
2	JTSS3200X-702	Sliding Table Handle		1
3	JTSS3000X-703	Work Handle		1
4	TS-1504031	Socket Head Cap Screw	M8x16	2
5	JTSS3000-427	Adjustment Plate		3
6	JTSS3200X-706	Holding Bracket		3
7	TS-1523061	Set Screw	M6x20	3
8	JTSS3000-428	Hex Cap Bolt	M14x40	3
9	JTSS3000-429	Hex Cap Bolt	M14x30	3
10	TS-2310142	Hex Nut	M14	12
11	JTSS3200X-711	Flat Washer (serial #14080022 and higher)		3
12	TS-2361141	Lock Washer	M14	3
13	TS-2361061	Lock Washer	M6	4
14	TS-2246162	Socket Head Button Screw	M6x16	4
15	TS-1540031	Hex Nut	M5	2
16	TS-1522011	Set Screw	M5x6	2
17	JTSS3200X-717	Safety Guard		1
18	JTSS3200X-718	Machine Screw	M5x8	2
19	JTSS3000-411	Push Handle		1
20	JTSS3000-448	Plastic Washer		1
21	JTSS3200X-721	Push Board Block		2
22	JTSS3000-444	Stop Board		1
23	JTSS3000-443	Stop Board Block		1
24	JTSS3000-447	Socket Set Screw	M10x10	2
25	TS-1550071	Flat Washer	M10	2
26	TS-1491021	Hex Cap Bolt	M10X20	1
27	JTSS3000-449	Adjust Lever	M10x20	1
28	JTSS3000-410	Push Board Block		1
29	JTSS3000-442	Push Bushing		1
30	JTSS3200X-730	Push Board Arbor		1
31	JTSS3000-438	Push Board		1
32	JTSS3000-446	Knob	M8x20	1
33	JTSS3000-441	Push Plate		1
34	JTSS3000-440	Push Plate Arbor		1
35	JTSS3000-436	Push Board Spring		1
36	JTSS3000-437	Ring	S14	1
37	JTSS3000-434	Cam		1
38	JTSS3000-433	Handle		1
39	JTSS3000-432	Ball Handle		1
40	JTSS3000-435	Spring Pin	ø5x30	1
	JTSS3000-571	Workpiece Hold-down Assembly (#28-#40)		1
	10000047XT-BG	Sliding Table Complete (Item 1-40)		1


Parts List For The JTSS-3200X Panel Saw Rip Fence Assembly

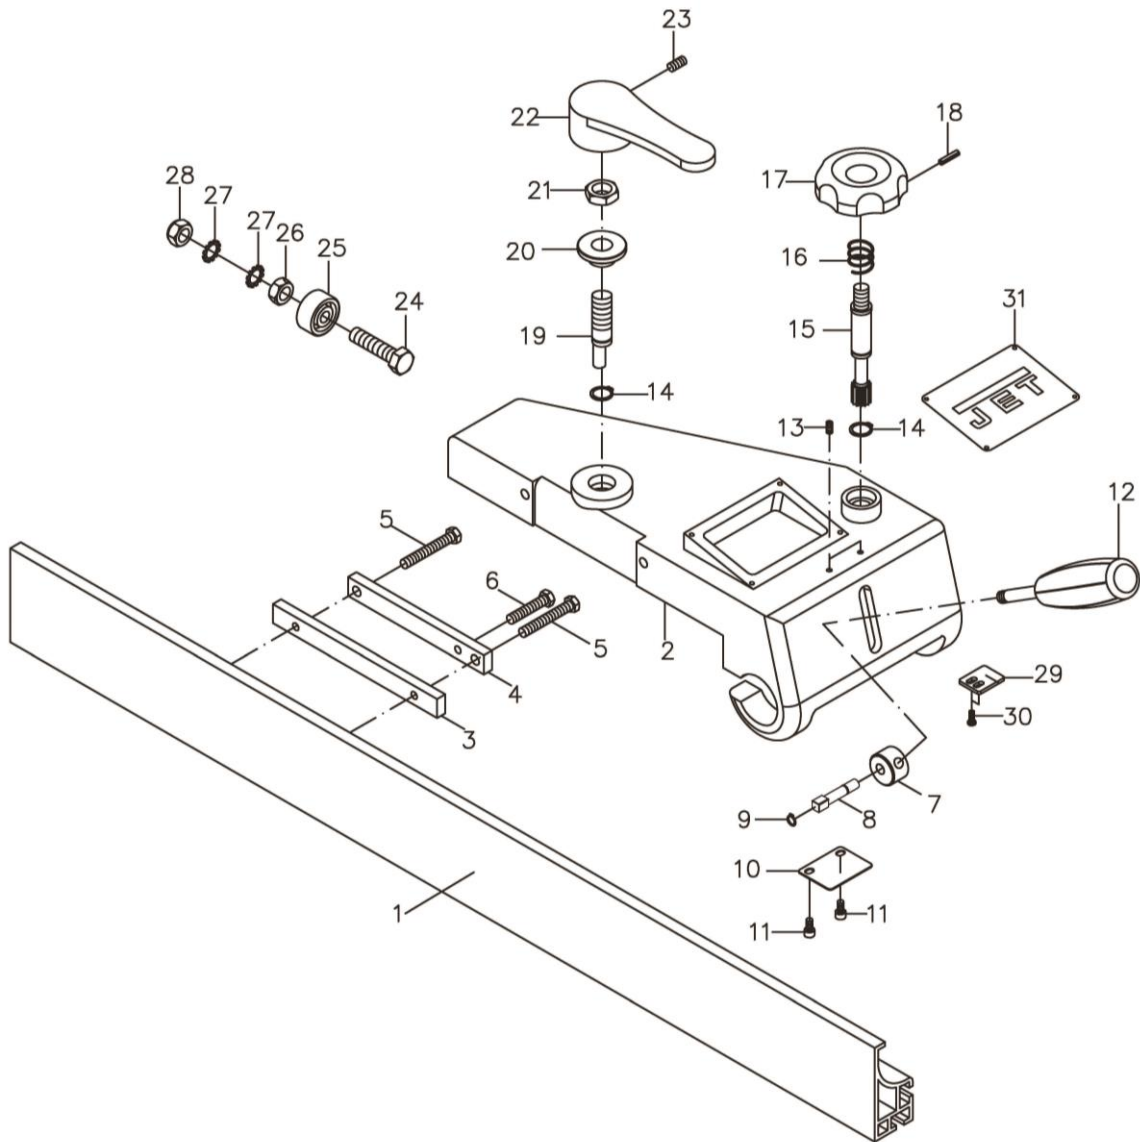

Rip Fence Assembly

Index No.	Part No.	Description	Size	Qty.
1.....	JTSS1500-501	Rip Fence Profile		1
2.....	JTSS3200X-502	Smooth Base		1
3.....	JTSS1500-502	Lock Block (Short)		1
4.....	JTSS1500-503	Lock Block (Long)		1
5.....	TS-1490101	Hex Cap Bolt	M8x55	2
6.....	TS-1490071	Hex Cap Bolt	M8x40	1
7.....	JTSS1500-508	Eccentric Wheel		1
8.....	JTSS1500-504	Eccentric Arbor		1
9.....	JTSS1500-509	Ring	STW-8	1
10.....	JTSS1500-505	Push Board		1
11.....	JTSS1500-507	Round Head Screw	M5x8	2
12.....	JTSS1500-519	Rubber Handle		1
13.....	TS-1522031	Set Screw	M5x10	2
14.....	JTSS1500-510	Ring	STW-16	2
15.....	JTSS3200X-515	Gear Arbor		1
16.....	JTSS1500-516	Spring		1
17.....	JTSS1500-532	Knob		1
18.....	JTSS1500-531	Spring Pin	Ø4x25	1
19.....	JTSS1500-522	Eccentric		1
20.....	JTSS1500-521	Bushing		1
21.....	TS-154010	Hex Nut	M16x2.0P	1
22.....	JTSS1500-520	Handle		1
23.....	TS-1523061	Set Screw	M6x20	1
24.....	TS-1492051	Hex Cap Bolt	M12x50	1
25.....	JTSS1500-526	Wheel		1
26.....	JTSS1500-527	Hex Nut	M12x1.25P	1
27.....	JTSS1500-528	Star Washer	Ø12	2
28.....	JTSS1500-529	Lock Nut	M12x1.25P	1
29.....	JTSS1500-512	Indicator		1
30.....	TS-2284081	Pan Head Screw	M4x10	2
31.....	JTSS1500-506	Label		1
.....	JTSS1500-RFA	Rip Fence Assembly (2-32)

Parts List For The JTSS-3200 Panel Saw Cross Cut Table Assembly

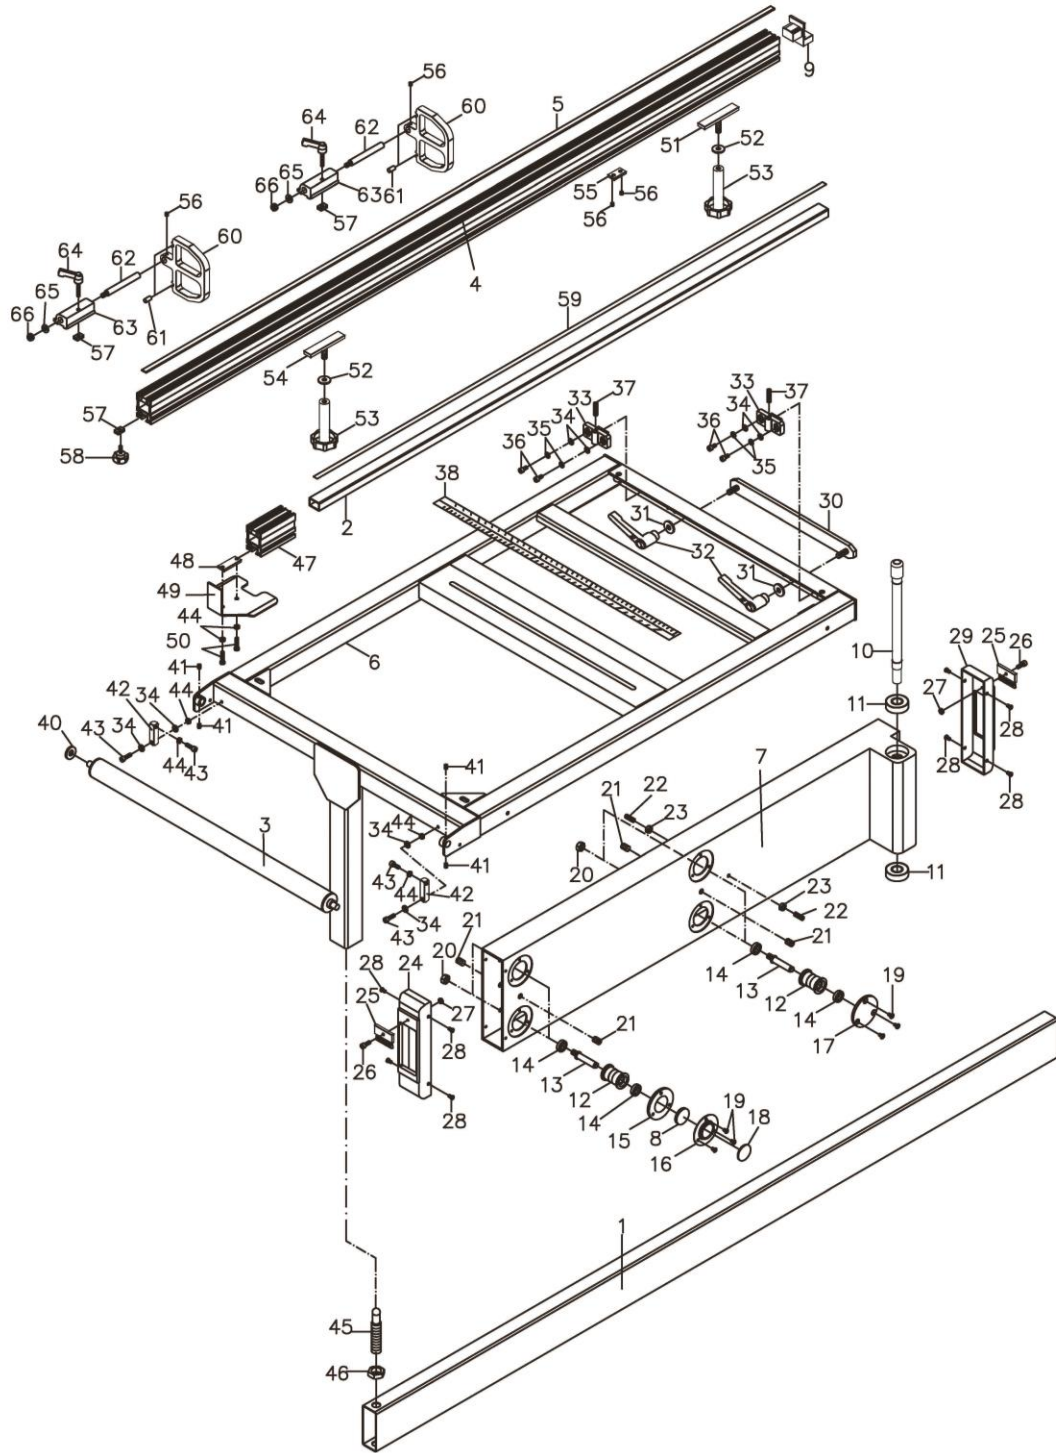

Cross Cut Table Assembly

Index No.	Part No.	Description	Size	Qty.
1.....	JTSS3000-301	Extension Sliding		1
2.....	JTSS3000-351	Scale Tube		1
3.....	JTSS3000-339	Work Table Roller Assembly		1
4.....	JTSS3000-355	Cross Cut Fence		1
5.....	JTSS3000-360	Scale		1
6.....	JTSS3000-336	Cross Cut Table		1
7.....	JTSS3200X-807	Support Arm		1
8.....	JTSS3000-308	Magnet		2
9.....	JTSS3000-356	End Plug for Cross Cut Fence		1
10.....	JTSS3200X-810	Arm Arbor		1
11.....	BB-6204ZZ	Ball Bearing	6204ZZ	2
12.....	JTSS3200X-812	Eccentric Wheel		4
13.....	JTSS3000-318	Eccentric Arbor		4
14.....	JTSS3000-307	Ball Bearing	6901ZZ	4
15.....	JTSS3000-305	Rotate Arbor Support		2
16.....	JTSS3000-309	Magnet Base		2
17.....	JTSS3200X-817	Rotate Arbor Support		2
18.....	JTSS3200X-817	Protector		4
19.....	JTSS3000-310	Flat Head Screw	M5x8	12
20.....	TS-2311101	Hex Nut	M10	4
21.....	JTSS3000-319	Nylon Set Screw	M12x12	4
22.....	TS-1524051	Socket Set Screw	M8x20	2
23.....	TS-2311081	Hex Nut	M8	2
24.....	JTSS3000-322	Sliding Arm Cover-Front		1
25.....	JTSS3000-320	Brush		2
26.....	TS-1502041	Socket Head Cap Screw	M5x15	2
27.....	TS-1540031	Hex Nut	M5	2
28.....	JTSS3000-313	Flat Head Screw	M5x8	8
29.....	JTSS3000-314	Sliding Arm Cover		1
30.....	JTSS3000-331	Lock Board		1
31.....	TS-1550071	Flat Washer	M10	2
32.....	JTSS3000-326	Adjust Lever		2
33.....	JTSS3000-333	Support Adjustment Block		2
34.....	TS-1550041	Flat Washer	M6	4
35.....	TS-2361061	Lock Washer	M6	4
36.....	TS-1503031	Socket Head Cap Screw	M6x12	4
37.....	TS-1524061	Set Screw	M8x30	2
38.....	JTSS3000-335	Angle Label		1
40.....	TS-2360121	Flat Washer	M12	2
41.....	TS-1523011	Socket Set Screw	M6x6	4
42.....	JTSS3000-330	Stop Block		2
43.....	TS-1503071	Socket Head Cap Screw	M6x30	4
44.....	TS-1540041	Hex Nut	M6	6
45.....	JTSS3000-303	Sliding Arm Arbor		1
46.....	JTSS3000-302	Hex Nut	M20xP2.5	1
47.....	JTSS3000-341	Cross Cut Fence		1
48.....	JTSS3000-342	Fix Plate		1

Index No.	Part No.	Description	Size	Qty.
49.....	JTSS3000-344	Cover Plate		1
50.....	JTSS3000-343	Round Head Screw	M6x25	2
51.....	JTSS3000-350	Fix Block		1
52.....	TS-1550071	Flat Washer	M10	2
53.....	JTSS3000-349	Knob	M10x90	2
54.....	JTSS3200X-851	Fix Block		1
55.....	JTSS3000-354	Fix Block		1
56.....	TS-1523011	Socket Set Screw	M6x6	4
57.....	JTSS3000-348	Set Nut		3
58.....	JTSS3000-346	JET Knob	M6x35	1
59.....	JTSS3000-340	Scale		1
60.....	JTSS3000-365	Clamping		2
61.....	JTSS3000-364	Clamping Rubber Pad		4
62.....	JTSS3000-357	Clamping Shaft		2
63.....	JTSS3000-361	Clamping Bracket		2
64.....	JTSS3000-363	Adjust Lever	M6x35	2
65.....	TS-1550061	Flat Washer	M8	2
66.....	TS-1540031	Lock Nut	M8	2
.....	JTSS3000-570	Crosscut Stop Assembly (56,57,60-66)		1

