



MBS-1011DAP **Metal Bandsaw**

MBS-1011DAP... 50000314T ...3~400V, 50Hz

PARTS LIST



JPW Tool Group Hong Kong Limited

98 Granville Road, Tsimshatsui East, Kowloon, Hong Kong, PRC

www.jettools.com

Импортер в РФ: ООО «ИТА Технолоджи»

105082, Москва, Переведеновский пер., д. 17

 
www.jettools.ru

Made in Taiwan / Сделано на Тайване

P-50000314T

2022-09

MBS-1011DAP Stand Assembly

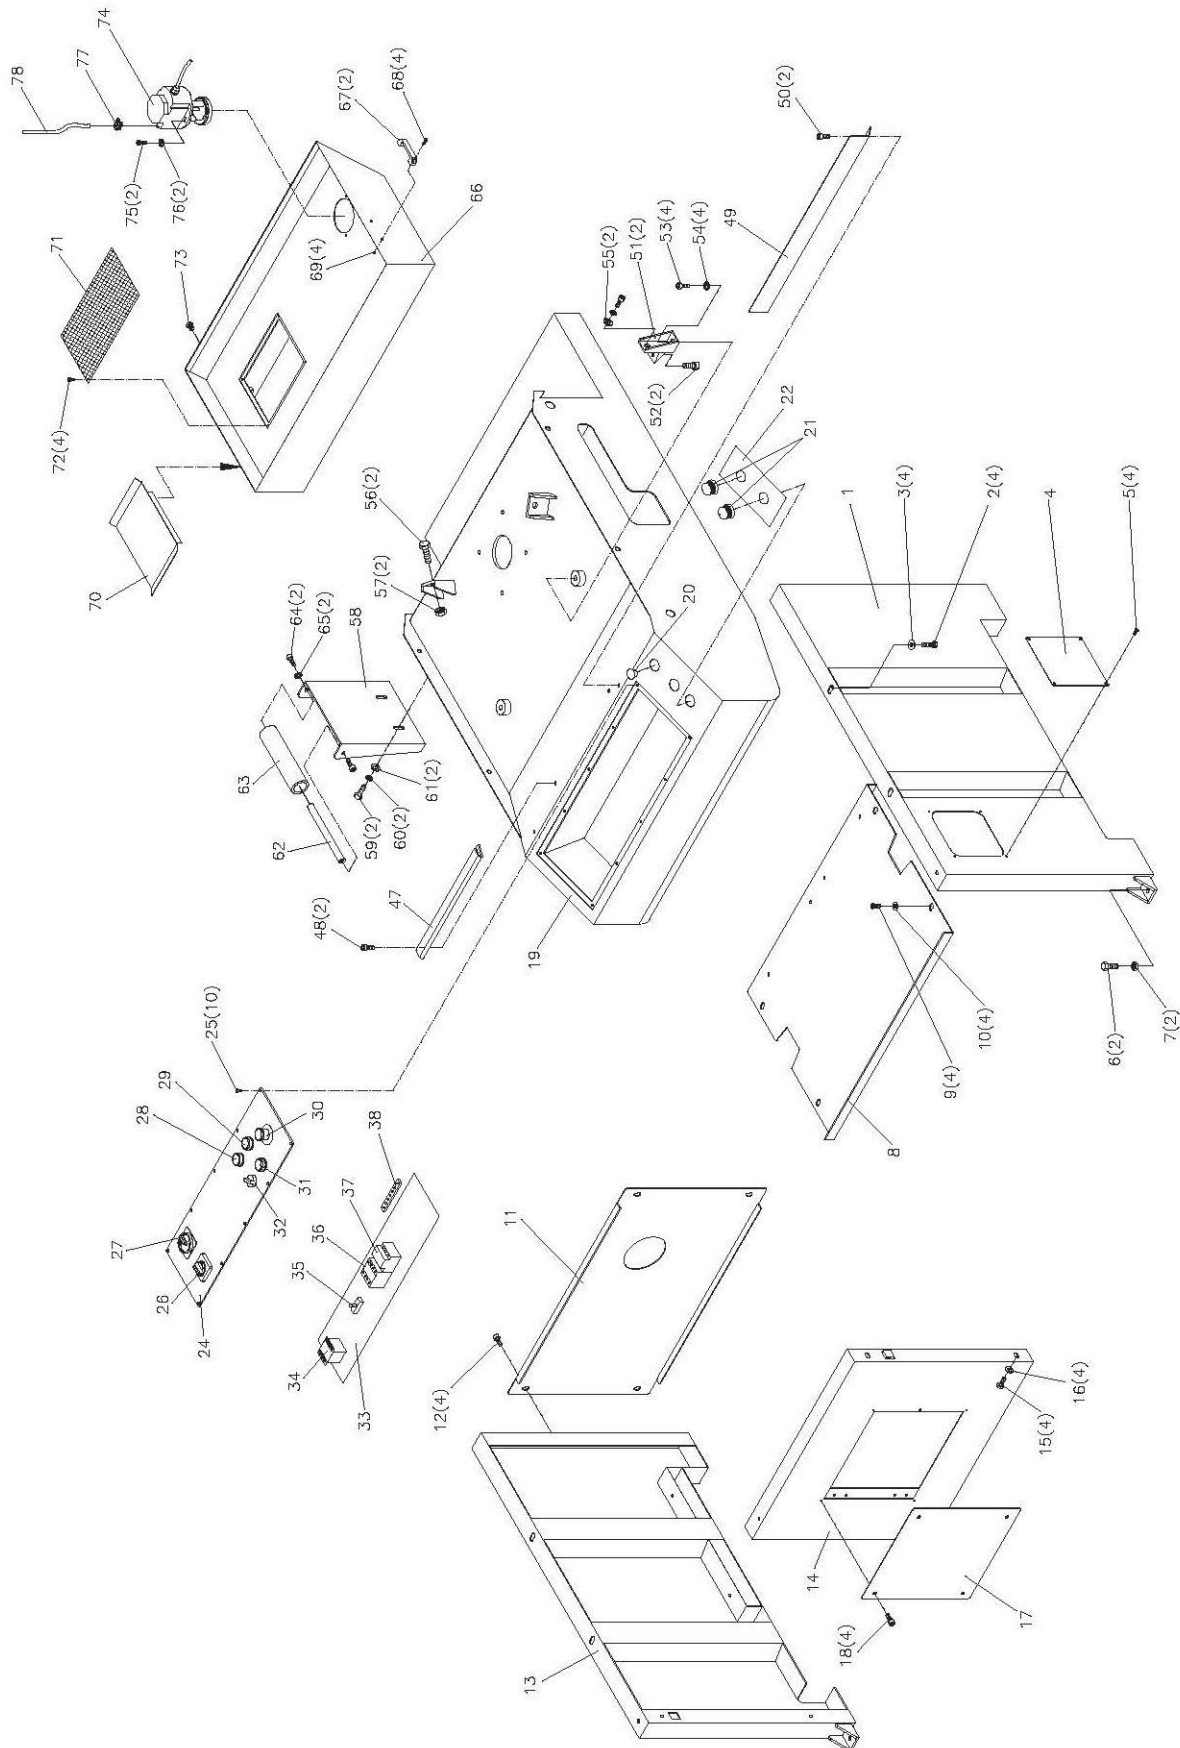


MBS-1011DAP Stand Assembly

Index No.	Part No.	Description	Size	Q'ty
1	MBS-1011DAP-1	Base (Right Part)		1
2	TS-1491021E	Hex. Cap Bolt	M10x20	4
3	MBS-1011DAP-3	Washer	10x25x2	4
4	MBS-1011DAP-4	Plate		1
5	TS-1502011E	Hex. Socket Cap Screw	M5x8	4
6	TS-1492041E	Hex. Cap Bolt	M12x40	2
7	MBS-1011DAP-7	Nut	M12	2
8	MBS-1011DAP-8	Base (Bottom Plate)		1
9	TS-1490021E	Hex. Cap Bolt	M8x16	4
10	MBS-1011DAP-10	Washer	8x18x2	4
11	MBS-1011DAP-11	Base (Rear Part)		1
12	TS-2246082E	Hex. Socket Cap Screw	M6x8	4
13	MBS-1011DAP-13	Base (Left Part)		1
14	MBS-1011DAP-14	Base (Front Part)		1
15	TS-1490021E	Hex. Cap Bolt	M8x16	4
16	MBS-1011DAP-16	Washer	8x18x2	4
17	MBS-1011DAP-17	Plate		1
18	TS-1502011E	Hex. Socket Cap Screw	M5x8	4
19	MBS-1011DAP-19	Saw Frame Stand		1
20	MBS-1011DAP-20	Hole Cover		1
21	MBS-1011DAP-21	Cutting Feed Knob		1
22	MBS-1011DAP-22	Flow Control Plate		1
24	MBS-1011DAP-24	Control Panel		1
25	MBS-1011DAP-25	Button Head Socket Screw	M5x8	10
26	MBS-1011DAP-26	Speed Select Switch		1
27	MBS-1011DAP-27	Main Power Switch		1
28	MBS-1011DAP-28	Power Indicator Light		1
29	MBS-1011DAP-29	Start Button		1
30	MBS-1011DAP-30	Emergency Stop Button		1
31	MBS-1011DAP-31	Stop Button		1
32	MBS-1011DAP-32	Manual / Auto Selector		1
33	MBS-1011DAP-33	Bottom Plate		1
34	MBS-1011DAP-34	Transformer		1
35	MBS-1011DAP-35	Fuse	2A	1
36	MBS-1011DAP-36	Overload Relay		1
37	MBS-1011DAP-37	Contactor	C-12D	1
38	MBS-1011DAP-38	Grounding Plate		1
47	MBS-1011DAP-47	Support Plate		1
48	TS-1504031E	Hex. Socket Cap Screw	M8x16	2
49	MBS-1011DAP-49	Water Proof Plate		1
50	TS-2246082E	Button Head Socket Screw	M6x8	2
51	MBS-1011DAP-51	Mounting Bracket		2
52	TS-1504031E	Hex. Socket Cap Screw	M8x16	2
53	TS-1505021E	Hex. Socket Cap Screw	M10x20	4
54	MBS-1011DAP-54	Spring Washer	M10	4
55	MBS-1011DAP-55	Washer	10x25x2	2
56	TS-1492041E	Hex. Cap Bolt	M12x40	2
57	MBS-1011DAP-57	Nut	M12	2
58	MBS-1011DAP-58	Roller Stand		1
59	TS-1492011E	Hex. Cap Bolt	M12x25	2
60	MBS-1011DAP-60	Spring Washer	M12	2
61	MBS-1011DAP-61	Washer	12x28x3	2
62	MBS-1011DAP-62	Roller Shaft	1/2"x269	1
	MBS-1011DAP-63A	Single Roller Assembly (including 58,62,63,64,65)		
63	MBS-1011DAP-63	Roller	50.8x268	1
64	TS-1504041E	Hex. Socket Cap Screw	M8x20	2
65	MBS-1011DAP-65	Spring Washer	M8	2
66	MBS-1011DAP-66	Coolant Tank		1
67	MBS-1011DAP-67	Handle		2

MBS-1011DAP Stand Assembly

Index No.	Part No.	Description	Size	Q'ty
68	TS-1503041E	Hex. Socket Cap Screw	M6x16	4
69	MBS-1011DAP-69	Nut	M6	4
70	MBS-1011DAP-70	Coolant Plate		1
71	MBS-1011DAP-71	Filter Net		1
72	TS-1533032E	Round Head Screw	M5x10	4
73	MBS-1011DAP-73	Plug	M3/8"	1
74	MBS-1011DAP-74	Pump	32W 400V 1 Ph.	1
75	TS-1503061E	Hex. Socket Cap Screw	M6x25	2
76	MBS-1011DAP-76	Washer	6x13x1	2
77	MBS-1011DAP-77	Hose Clamp	13mm	1
78	MBS-1011DAP-78	Hose	5/16x172cm	1

 MBS-1011DAP Swivel & Base Assembly

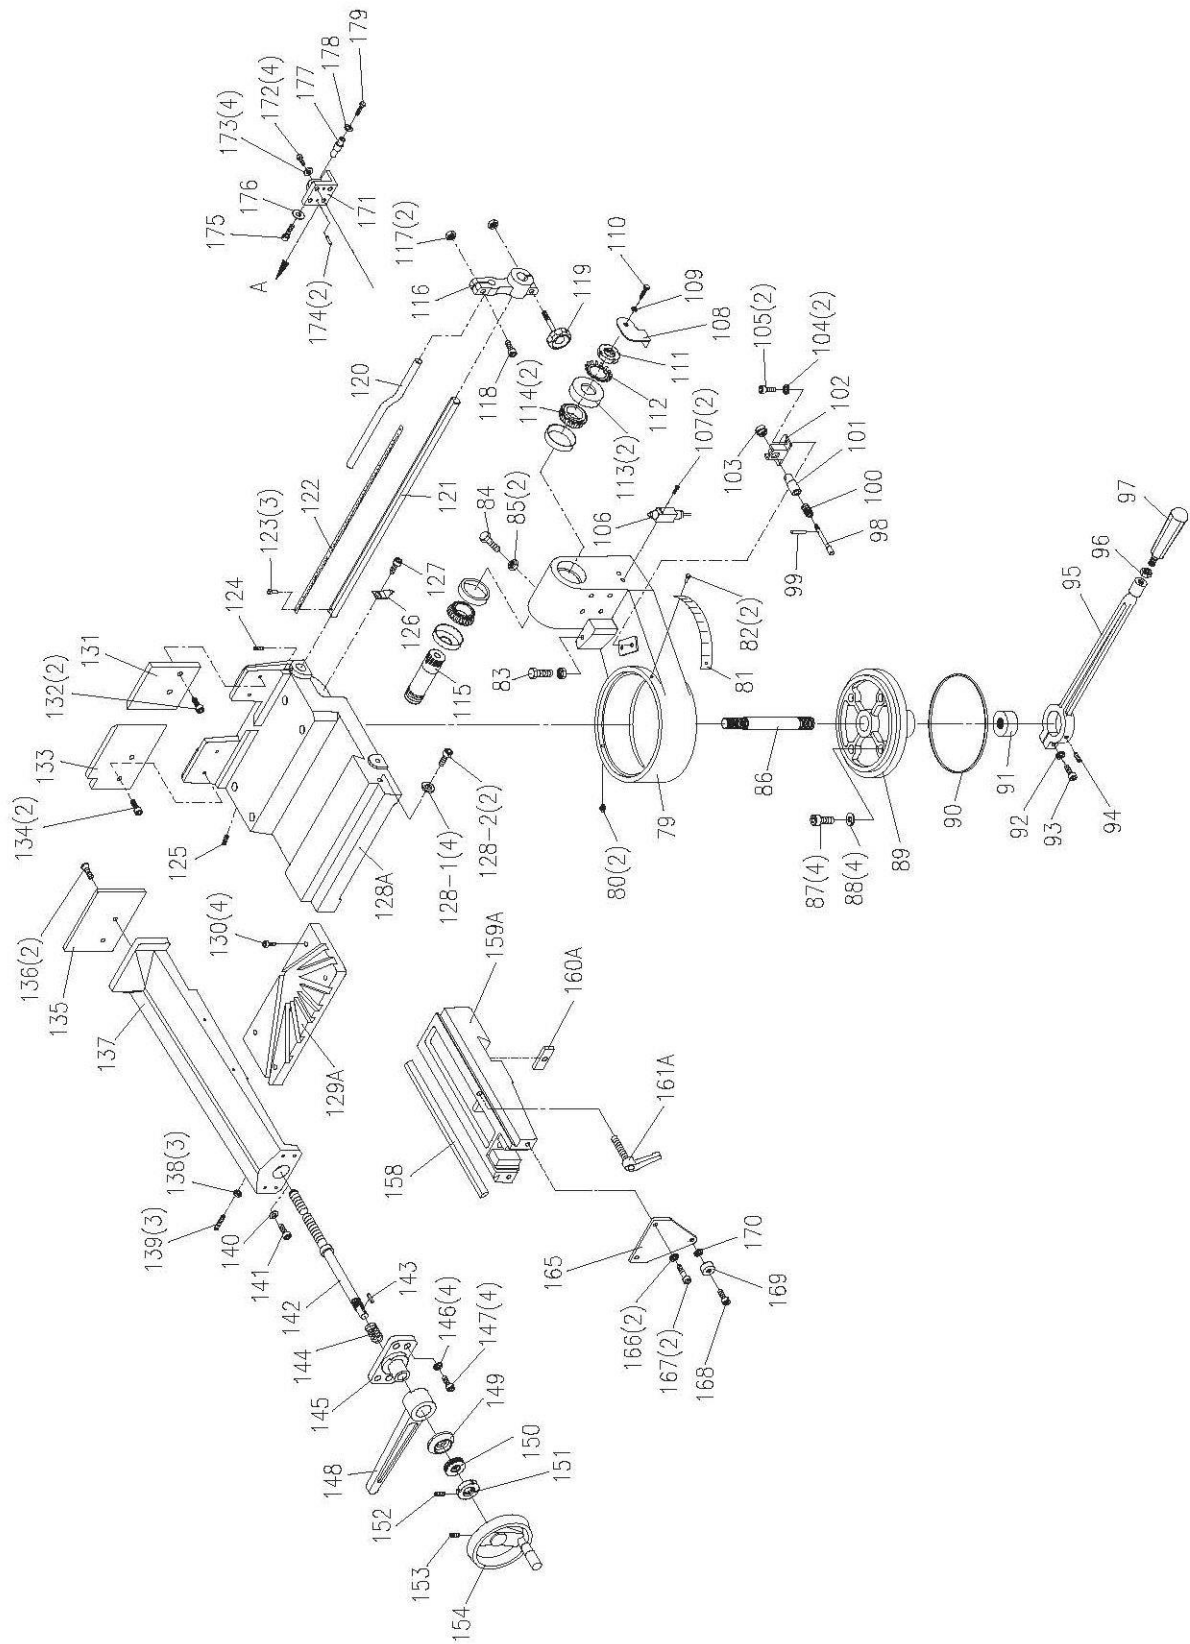


MBS-1011DAP Swivel & Base Assembly

Index No.	Part No.	Description	Size	Q'ty
79	MBS-1011DAP-79	Swivel Arm		1
80	MBS-1011DAP-80	Oil Inlet	1/16"	2
81	MBS-1011DAP-81	Scale		1
82	MBS-1011DAP-82	Rivet	2.3x4	2
83	TS-1491061E	Hex. Cap Bolt	M10x40	1
84	TS-1491061E	Hex. Cap Bolt	M10x40	1
85	MBS-1011DAP-85	Nut	M10	2
86	MBS-1011DAP-86	Shaft		1
87	TS-1504061E	Hex. Socket Cap Screw	M8x30	4
88	MBS-1011DAP-88	Spring Washer	M8	4
89	MBS-1011DAP-89	Disk		1
90	MBS-1011DAP-90	Oil Seal	4mmx675L mm	1
91	MBS-1011DAP-91	Shaft Nut		1
92	MBS-1011DAP-92	Spring Washer	M10	1
93	TS-1505051E	Hex. Socket Cap Screw	M10x35	1
94	TS-1525031E	Set Screw	M10x16	1
95	MBS-1011DAP-95	Locking Lever		1
96	MBS-1011DAP-96	Nut	M12	1
97	MBS-1011DAP-97	Handle		1
98	MBS-1011DAP-98	Pin		1
99	MBS-1011DAP-99	Spring Pin	Ø2.5x16	1
100	MBS-1011DAP-100	Spring	0.8x9x30mm	1
101	MBS-1011DAP-101	Bushing		1
102	MBS-1011DAP-102	Bracket		1
103	MBS-1011DAP-103	Knob		1
104	MBS-1011DAP-104	Spring Washer	M8	2
105	TS-1524061E	Hex. Socket Cap Screw	M8x25	2
106	MBS-1011DAP-106	Limit Switch		1
107	TS-1501081E	Hex. Socket Cap Screw	M4x30	2
108	MBS-1011DAP-108	Limit Switch Cover		1
109	MBS-1011DAP-109	Spring Washer	M8	1
110	TS-1504031E	Hex. Socket Cap Screw	M8x16	1
111	MBS-1011DAP-111	Jam Nut	M35	1
112	MBS-1011DAP-112	Star Washer	M35	1
113	MBS-1011DAP-113	Anti-Dust Cover	35mm	2
114	BB-32007E	Bearing	32007	2
115	MBS-1011DAP-115	Shaft		1
116	MBS-1011DAP-116	Bar Bracket		1
117	MBS-1011DAP-117	Nut	M8	2
118	TS-1504051E	Hex. Socket Cap Screw	M8x25	1
119	MBS-1011DAP-119	Knob	M8x30	1
120	MBS-1011DAP-120	Stop Bar		1
	MBS-1011DAP-121A	Stop-Rod Assembly (including 116-123)		
121	MBS-1011DAP-121	Bar-Stop-Rod		1
122	MBS-1011DAP-122	Scale		1
123	MBS-1011DAP-123	Rivet	2x5	3
124	TS-1523041E	Set Screw	M6x12	1
125	TS-1524021E	Set Screw	M8x10	1
126	MBS-1011DAP-126	Pointer		1
127	TS-1502011E	Hex. Socket Cap Screw	M5x8	1
128A	MBS-1011DAP-128A	Table		1
128-1	MBS-1011DAP-128-1	Washer	10x25x2	4
128-2	TS-1505021E	Hex. Socket Cap Screw	M10x20	2
129A	MBS-1011DAP-129A	Changeable Plate		1
130	TS-1504031E	Hex. Socket Cap Screw	M8x16	4
131	MBS-1011DAP-131	Vise Jaw - Right		1
132	TS-1503041E	Hex. Socket Cap Screw	M6x16	2
133	MBS-1011DAP-133	Vise Jaw - Left		1
134	TS-1503041E	Hex. Socket Cap Screw	M6x16	2
135	MBS-1011DAP-135	Vise Jaw - Front		1

MBS-1011DAP Swivel & Base Assembly

Index No.	Part No.	Description	Size	Q'ty
136	MBS-1011DAP-136	Flat Head Machine Screw	M6x16	2
137	MBS-1011DAP-137	Movable Vise		1
138	MBS-1011DAP-138	Nut	M5	3
139	MBS-1011DAP-139	Set Screw	M5x25	3
140	MBS-1011DAP-140	Washer	8x23x2	1
141	TS-1504031E	Hex. Socket Cap Screw	M8x16	1
142	MBS-1011DAP-142	Lead Screw		1
143	MBS-1011DAP-143	Key	5x5x15	1
144	MBS-1011DAP-144	Compressed Spring	5x31x35mm	1
145	MBS-1011DAP-145	Setting Seat		1
146	MBS-1011DAP-146	Spring Washer	M8	4
147	TS-1504041E	Hex. Socket Cap Screw	M8x20	4
148	MBS-1011DAP-148	Lock Handle		1
149	MBS-1011DAP-149	Bearing Bushing		1
150	BB-51104E	Bearing	51104	1
151	MBS-1011DAP-151	Nut	M20	1
152	MBS-1011DAP-152	Set Screw	M5x5	1
153	TS-1524021E	Set Screw	M8x10	1
154	MBS-1011DAP-154	Hand Wheel	6-1/2"	1
158	MBS-1011DAP-158	Dovetail Plate		1
159A	MBS-1011DAP-159A	Vise Seat		1
160A	MBS-1011DAP-160A	Vise Setting Plate		1
161A	MBS-1011DAP-161A	Handle	M10x35	1
165	MBS-1011DAP-165	Setting Plate		1
166	MBS-1011DAP-166	Spring Washer	M8	2
167	TS-1504041E	Hex. Socket Cap Screw	M8x20	2
168	TS-1504031E	Hex. Socket Cap Screw	M8x16	1
169	BB-608ZZE	Bearing	608ZZ	1
170	MBS-1011DAP-170	Spring Washer	M8	1
171	MBS-1011DAP-171	Bottom Support		1
172	TS-1504051E	Hex. Socket Cap Screw	M8x25	4
173	MBS-1011DAP-173	Spring Washer	M8	4
174	MBS-1011DAP-174	Spring Pin	6x20	2
175	TS-1490021E	Hex. Cap Bolt	M8x16	1
176	MBS-1011DAP-176	Washer	8x30x2.5	1
177	MBS-1011DAP-177	Lower Shaft		1
178	MBS-1011DAP-178	Washer	8x18x2	1
179	TS-1490021E	Hex. Cap Bolt	M8x16	1

 MBS-1011DAP Bow Assembly

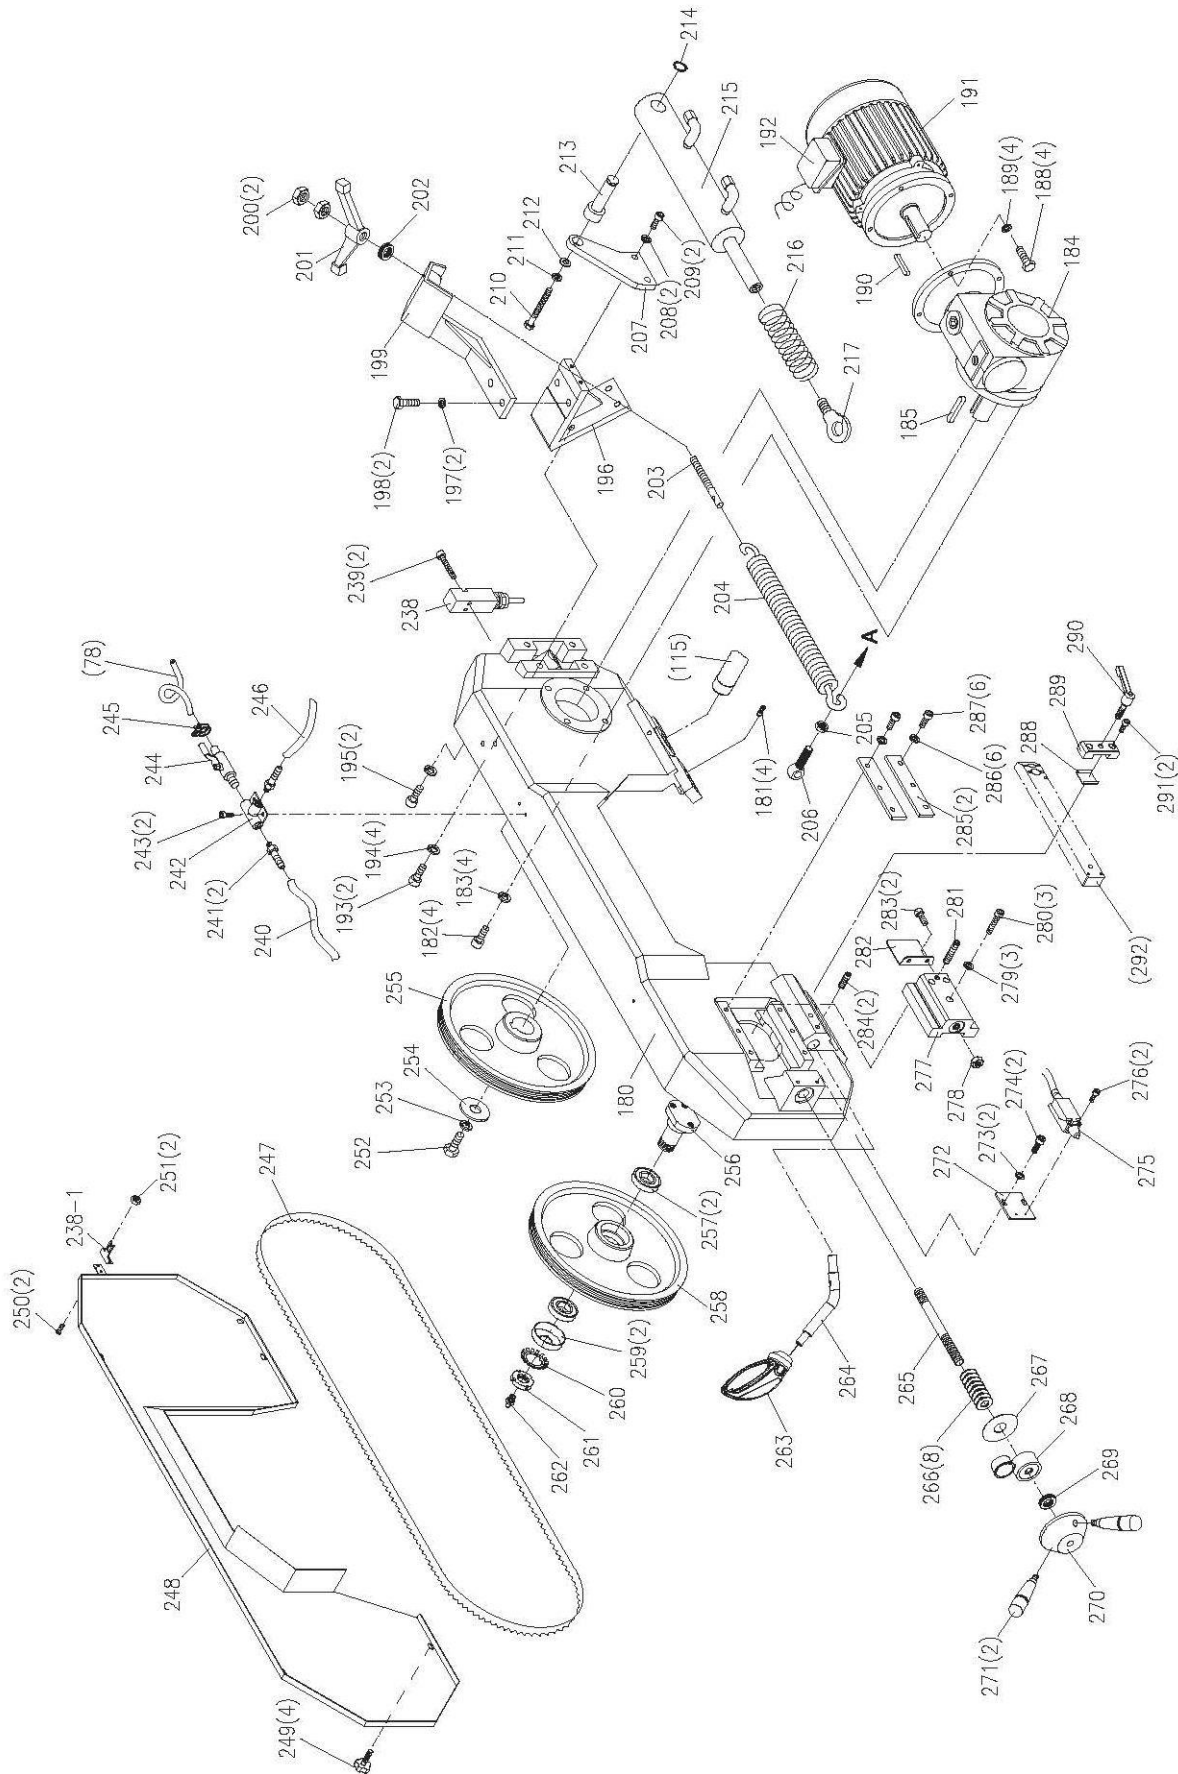


MBS-1011DAP Bow Assembly

Index No.	Part No.	Description	Size	Q'ty
180	MBS-1011DAP-180	Saw Arm		1
181	TS-1523041E	Set Screw	M6x12	4
182	TS-1505061E	Hex. Socket Cap Screw	M10x40	4
183	MBS-1011DAP-183	Spring Washer	M10	4
184	MBS-1011DAP-184	Reduction Unit		1
185	MBS-1011DAP-185	Key	7x7x25	1
188	TS-1491031E	Hex. Cap Bolt	M10x25	4
189	MBS-1011DAP-189	Spring Washer	M10	4
190	MBS-1011DAP-190	Key	6x6x30	1
191	MBS-1011DAP-191	Motor	1.1/0.56kW 400V 3 Ph	1
192	MBS-1011DAP-192	Junction Box		1
193	TS-1505081E	Hex. Socket Cap Screw	M10x50	2
194	MBS-1011DAP-194	Spring Washer	M10	4
195	TS-1505071E	Hex. Socket Cap Screw	M10x45	2
196	MBS-1011DAP-196	Cylinder Coupling		1
197	MBS-1011DAP-197	Spring Washer	M12	2
198	TS-1492011E	Hex. Cap Bolt	M12x25	2
199	MBS-1011DAP-199	Spring Holder		1
200	MBS-1011DAP-200	Nut	M16	2
201	MBS-1011DAP-201	Handle		1
202	BB-51103E	Bearing	51103	1
203	MBS-1011DAP-203	Adjusting Bolt		1
204	MBS-1011DAP-204	Tension Spring		1
205	MBS-1011DAP-205	Nut	M12	1
206	MBS-1011DAP-206	Spring Hook		1
207	MBS-1011DAP-207	Support Plate		1
208	MBS-1011DAP-208	Spring Washer	M10	2
209	TS-1491031E	Hex. Cap Bolt	M10x25	2
210	TS-1492011E	Hex. Cap Bolt	M12x25	1
211	MBS-1011DAP-211	Spring Washer	M12	1
212	MBS-1011DAP-212	Washer	12x28x3	1
213	MBS-1011DAP-213	Upper Shaft		1
214	MBS-1011DAP-214	Ring	S-20	1
215	MBS-1011DAP-215	Hydraulic Cylinder		1
216	MBS-1011DAP-216	Compress Spring		1
217	MBS-1011DAP-217	Spring Hook		1
238	MBS-1011DAP-238	Limit Switch		1
238-1	MBS-1011DAP-238-1	Switch Pin		1
239	TS-1501081E	Hex. Socket Cap Screw	M4x30	2
240	MBS-1011DAP-240	Hose	5/16"	1
241	MBS-1011DAP-241	Pipe Fitting	1/4Px5/16	2
242	MBS-1011DAP-242	T Connector		1
243	TS-1502041E	Hex. Socket Cap Screw	M5x16	2
244	MBS-1011DAP-244	Coolant Switch	1/4Px5/16	1
245	MBS-1011DAP-245	Hose Clamp	13mm	1
246	MBS-1011DAP-246	Hose	5/16"	1
247	MBS-1011DAP-247	Saw Blade	27x0.9x2685mm 5/8T	1
248	MBS-1011DAP-248	Blade Cover		1
249	MBS-1011DAP-249	Plum Screw W/Spacer	M6x12	4
250	MBS-1011DAP-250	Round Head Screw	M4x8	2
251	MBS-1011DAP-251	Nut	M4	2
252	TS-1491031E	Hex. Cap Bolt	M10x25	1
253	MBS-1011DAP-253	Spring Washer	M10	1
254	MBS-1011DAP-254	Washer		1
255	MBS-1011DAP-255	Drive Flywheel		1
256	MBS-1011DAP-256	Idle Flywheel Shaft		1
257	BB-32006E	Bearing	32006	2

MBS-1011DAP Bow Assembly

Index No.	Part No.	Description	Size	Q'ty
258	MBS-1011DAP-258	Idle Flywheel		1
259	MBS-1011DAP-259	Anti-dust Cover	30mm	2
260	MBS-1011DAP-260	Star Washer	M30	1
261	MBS-1011DAP-261	Jam Nut	M30	1
262	MBS-1011DAP-262	Oil Inlet	1/16"	1
263	HS-201402	Trigger Switch		1
264	MBS-1011DAP-264	Rod		1
265	MBS-1011DAP-265	Tension Shaft	M16x230	1
266	MBS-1011DAP-266	Thrust Spring Washer		8
267	MBS-1011DAP-267	Plate		1
268	MBS-1011DAP-268	Blade Tension Gauge		1
269	BB-51103E	Bearing	51103	1
270	MBS-1011DAP-270	Handle Wheel		1
271	MBS-1011DAP-271	Handle		2
272	MBS-1011DAP-272	Plate		1
273	MBS-1011DAP-273	Washer	6x13x1	2
274	TS-1503031E	Hex. Socket Cap Screw	M6x12	2
275	MBS-1011DAP-275	Limit Switch		1
276	TS-1501071E	Hex. Socket Cap Screw	M4x25	2
277	MBS-1011DAP-277	Slide Bracket		1
278	MBS-1011DAP-278	Nut	M16	1
279	MBS-1011DAP-279	Spring Washer	M10	3
280	TS-1505071E	Hex. Socket Cap Screw	M10x45	3
281	TS-1525051E	Set Screw	M10x25	1
282	MBS-1011DAP-282	Cover Plate		1
283	TS-1503011E	Hex. Socket Cap Screw	M6x8	2
284	TS-1524021E	Set Screw	M8x10	2
285	MBS-1011DAP-285	Gib		2
286	MBS-1011DAP-286	Spring Washer	M8	6
287	TS-1504041E	Hex. Socket Cap Screw	M8x20	6
288	MBS-1011DAP-288	Press Plate		1
289	MBS-1011DAP-289	Setting Bracket		1
290	MBS-1011DAP-290	Handle	M10x25	1
291	TS-1504051E	Hex. Socket Cap Screw	M8x25	2
292	MBS-1011DAP-292	Blade Guide Movable Rod		1

 MBS-1011DAP Bearing Guide Assembly

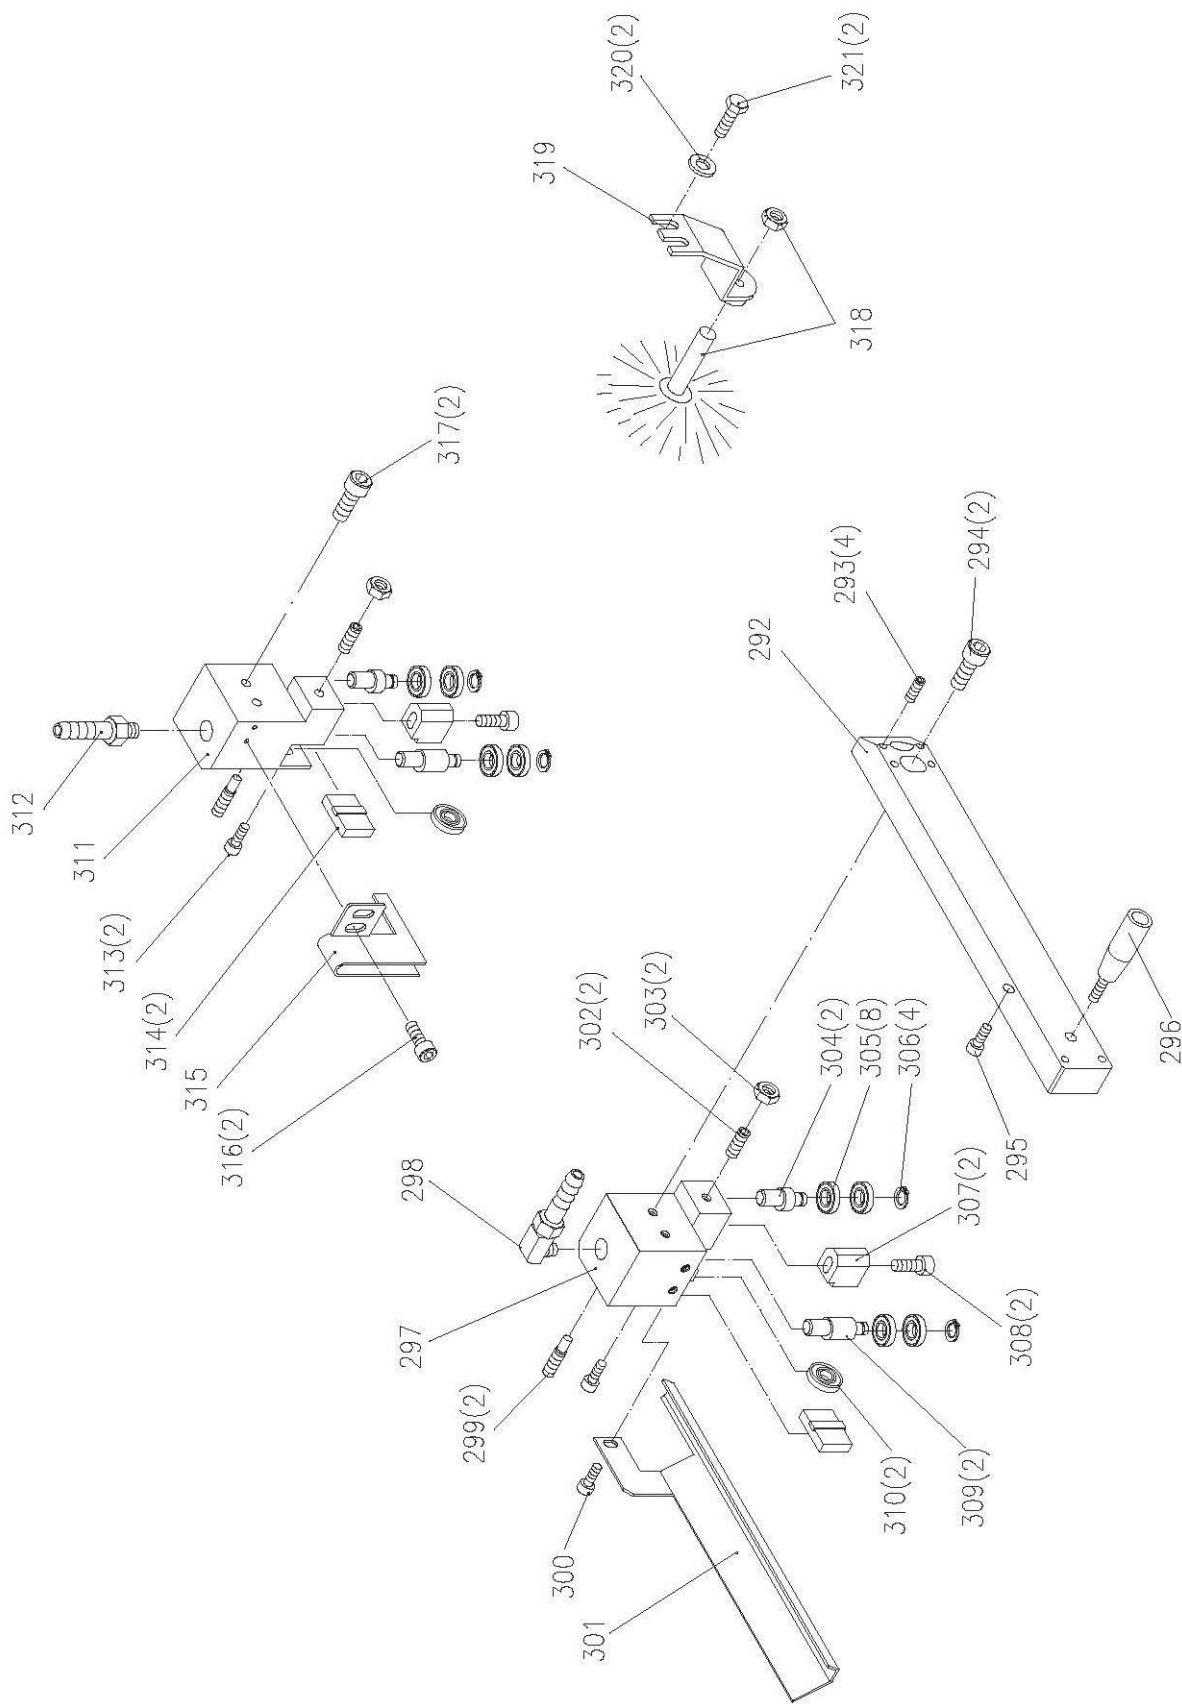

MBS-1011DAP Bearing Guide Assembly

Index No.	Part No.	Description	Size	Q'ty
293	TS-1523041E	Set Screw	M6x12	4
294	TS-1504041E	Hex. Socket Cap Screw	M8x20	2
295	TS-1503011E	Hex. Socket Cap Screw	M6x8	1
296	MBS-1011DAP-296	Handle	M6x60	1
	MBS-1011DAP-297A	Bearing Guide Assembly (Front)		
		(including 297,299,302,303,304,305,306,307,308,309,310,313,314)		
297	MBS-1011DAP-297	Guide Bracket		1
298	MBS-1011DAP-298	Pipe Fitting	1/4Px5/16	1
299	MBS-1011DAP-299	Bolt		2
300	TS-1503011E	Hex. Socket Cap Screw	M6x8	1
301	MBS-1011DAP-301	Blade Guard		1
302	TS-1523041E	Set Screw	M6x12	2
303	MBS-1011DAP-303	Nut	M6	2
304	MBS-1011DAP-304	Centric Shaft		2
305	BB-608ZZE	Bearing	608ZZ	8
306	MBS-1011DAP-306	E-Ring	E-7	4
307	MBS-1011DAP-307	Blade Guide		2
308	TS-1503061E	Hex. Socket Cap Screw	M6x25	2
309	MBS-1011DAP-309	Eccentric Shaft		2
310	BB-608ZZE	Bearing	608ZZ	2
	MBS-1011DAP-311A	Bearing Guide Assembly (Rear)		
		(including 299,302,303,304,305,306,307,308,309,310,311,313,314)		
311	MBS-1011DAP-311	Guide Bracket		1
312	MBS-1011DAP-312	Pipe Fitting	1/4Px5/16	1
313	TS-1503011E	Hex. Socket Cap Screw	M6x8	2
314	MBS-1011DAP-314	Blade Guide		2
315	MBS-1011DAP-315	Blade Guard		1
316	TS-1503011E	Hex. Socket Cap Screw	M6x8	2
317	TS-1504041E	Hex. Socket Cap Screw	M8x20	2
318	MBS-1011DAP-318	Brush W/Nut	Ø50	1
319	MBS-1011DAP-319	Brush Clamp		1
320	MBS-1011DAP-320	Washer	6x13x1	2
321	TS-1482021E	Hex. Cap Bolt	M6x12	2

