



MBS-56CS

Metal Working Bandsaw

MBS-56CS....50000320M.....1~230V, 50Hz

PARTS LIST



JPW Tool Group Hong Kong Limited

98 Granville Road, Tsimshatsui East, Kowloon, Hong Kong, PRC

www.jettools.com

Импортер в РФ: ООО «ИТА Технолоджи»

105082, Москва, Переведеновский пер., д. 17


www.jettools.ru

Made in Taiwan / Сделано на Тайване


P-50000320M

2023/05



Breakdown for Bow Assembly

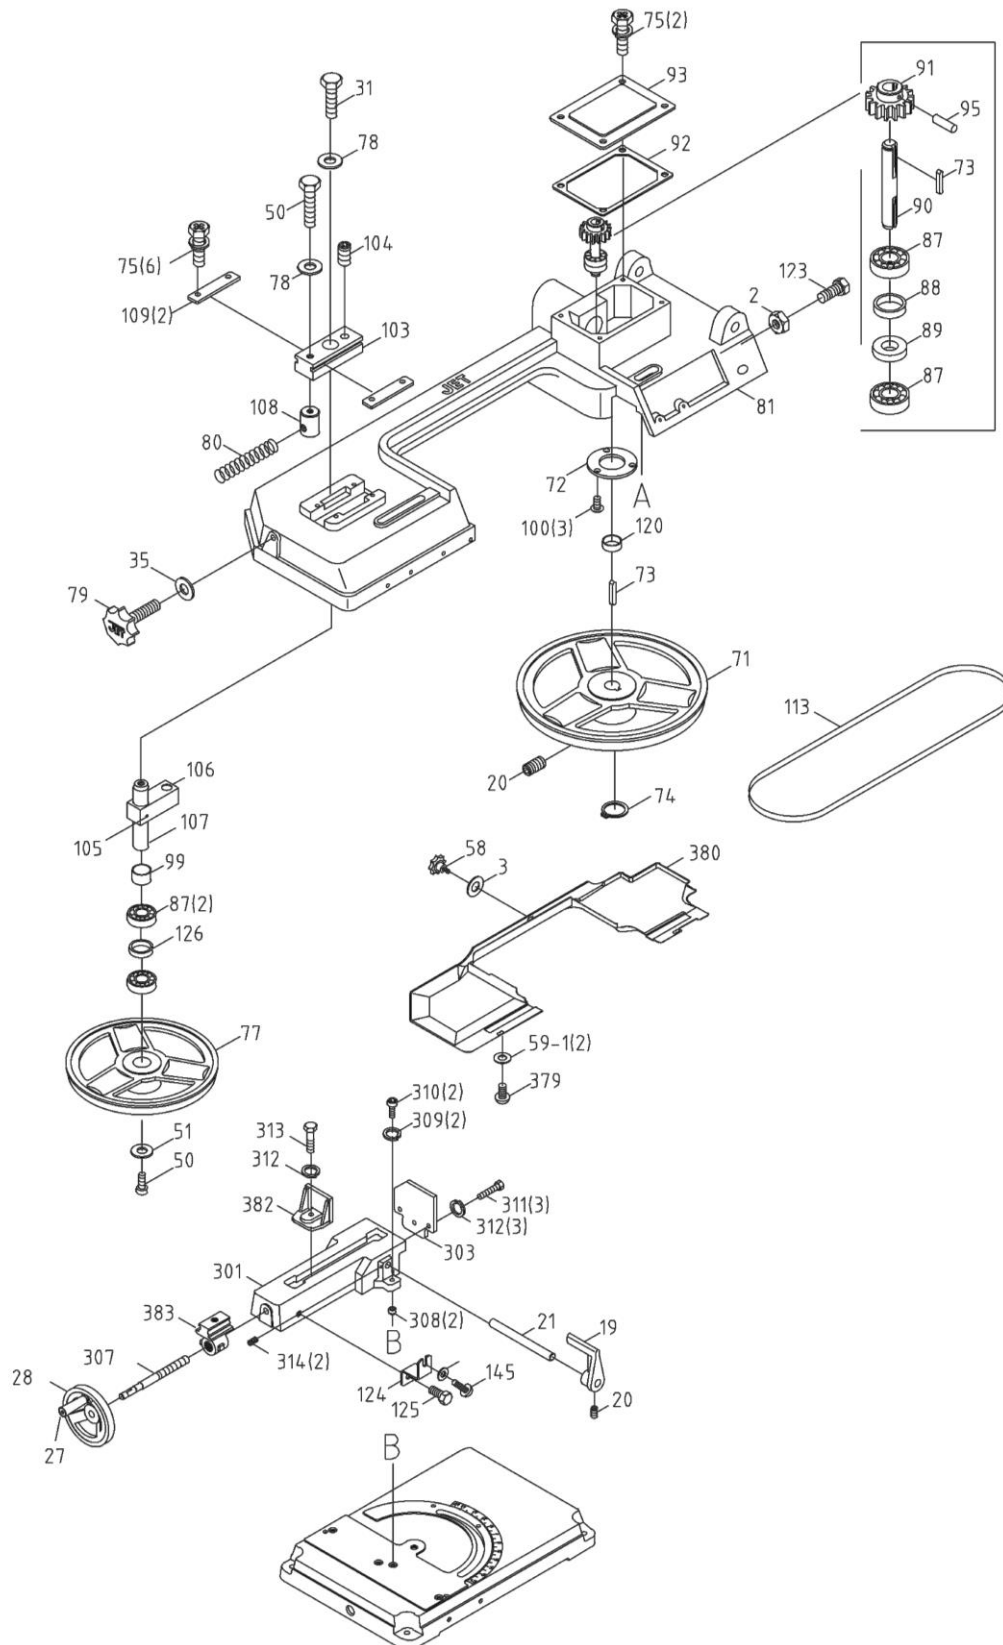


Breakdown for Bow Assembly

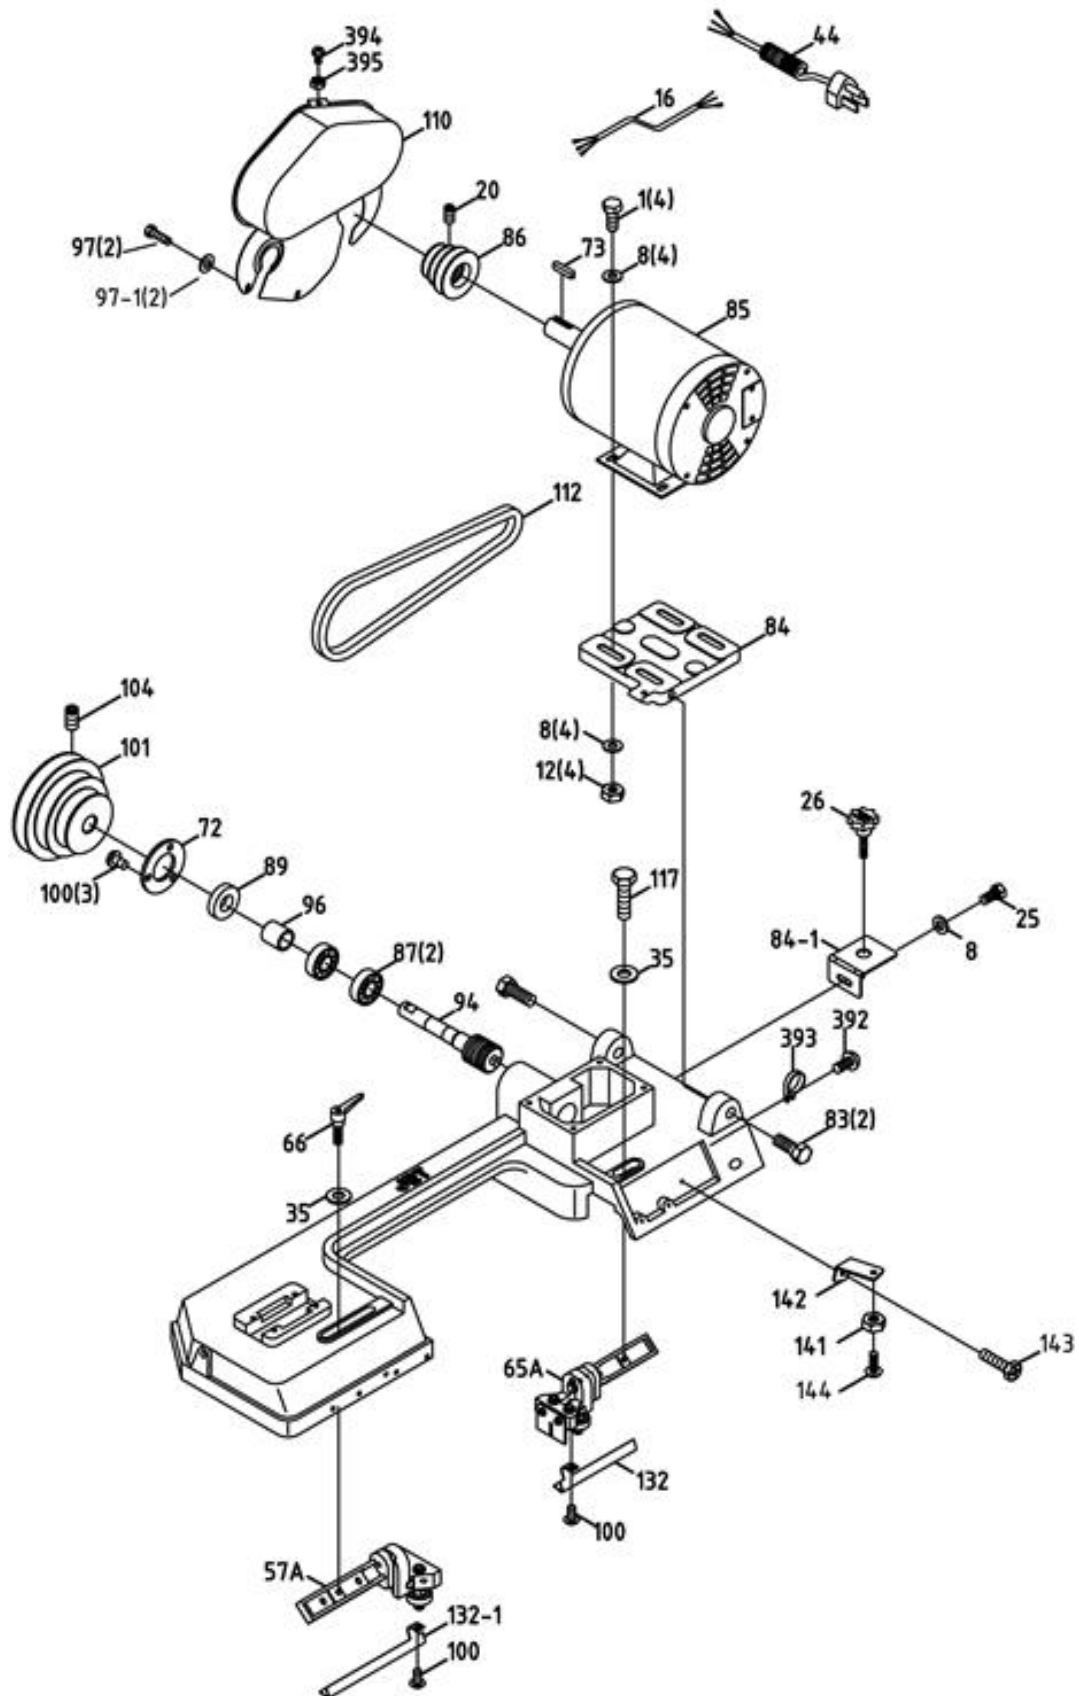

Breakdown for blade guide Assembly

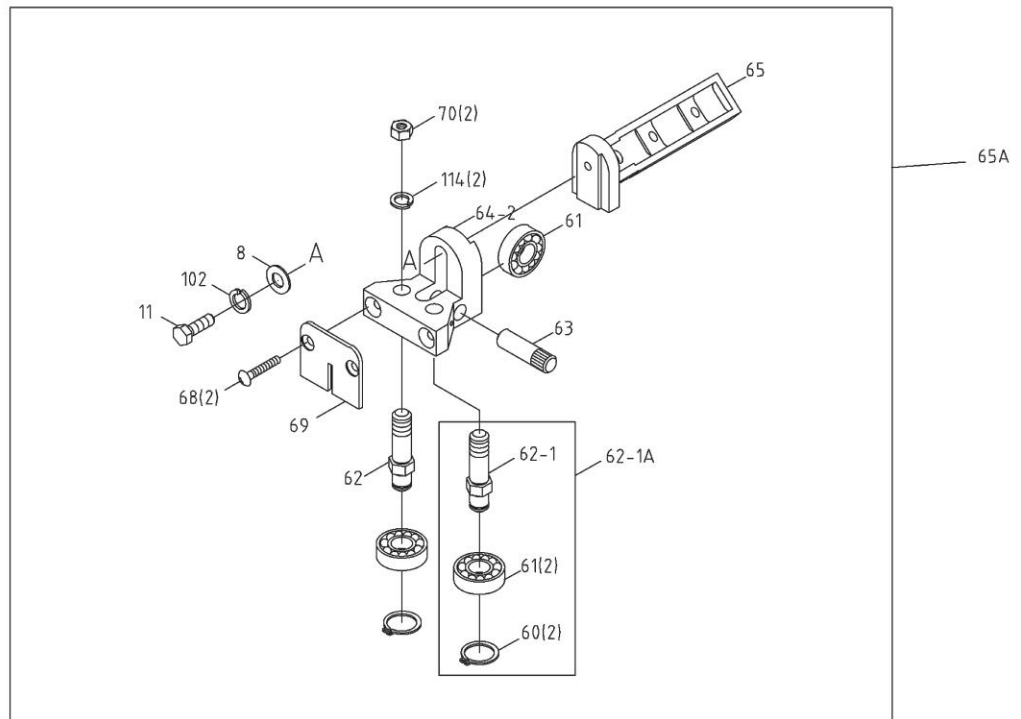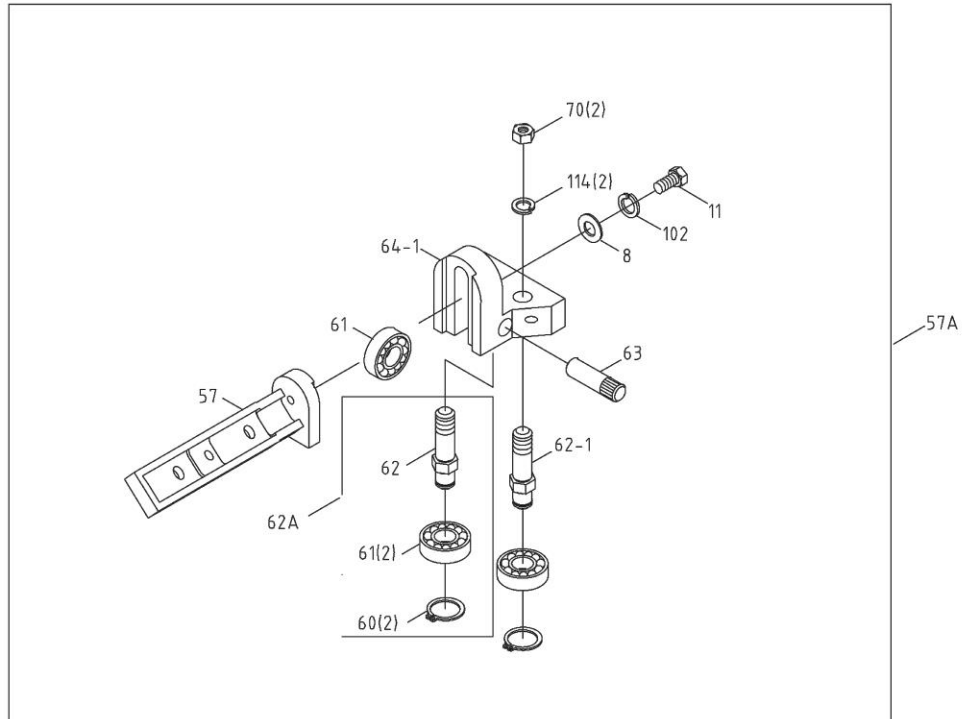

Breakdown for Base Assembly

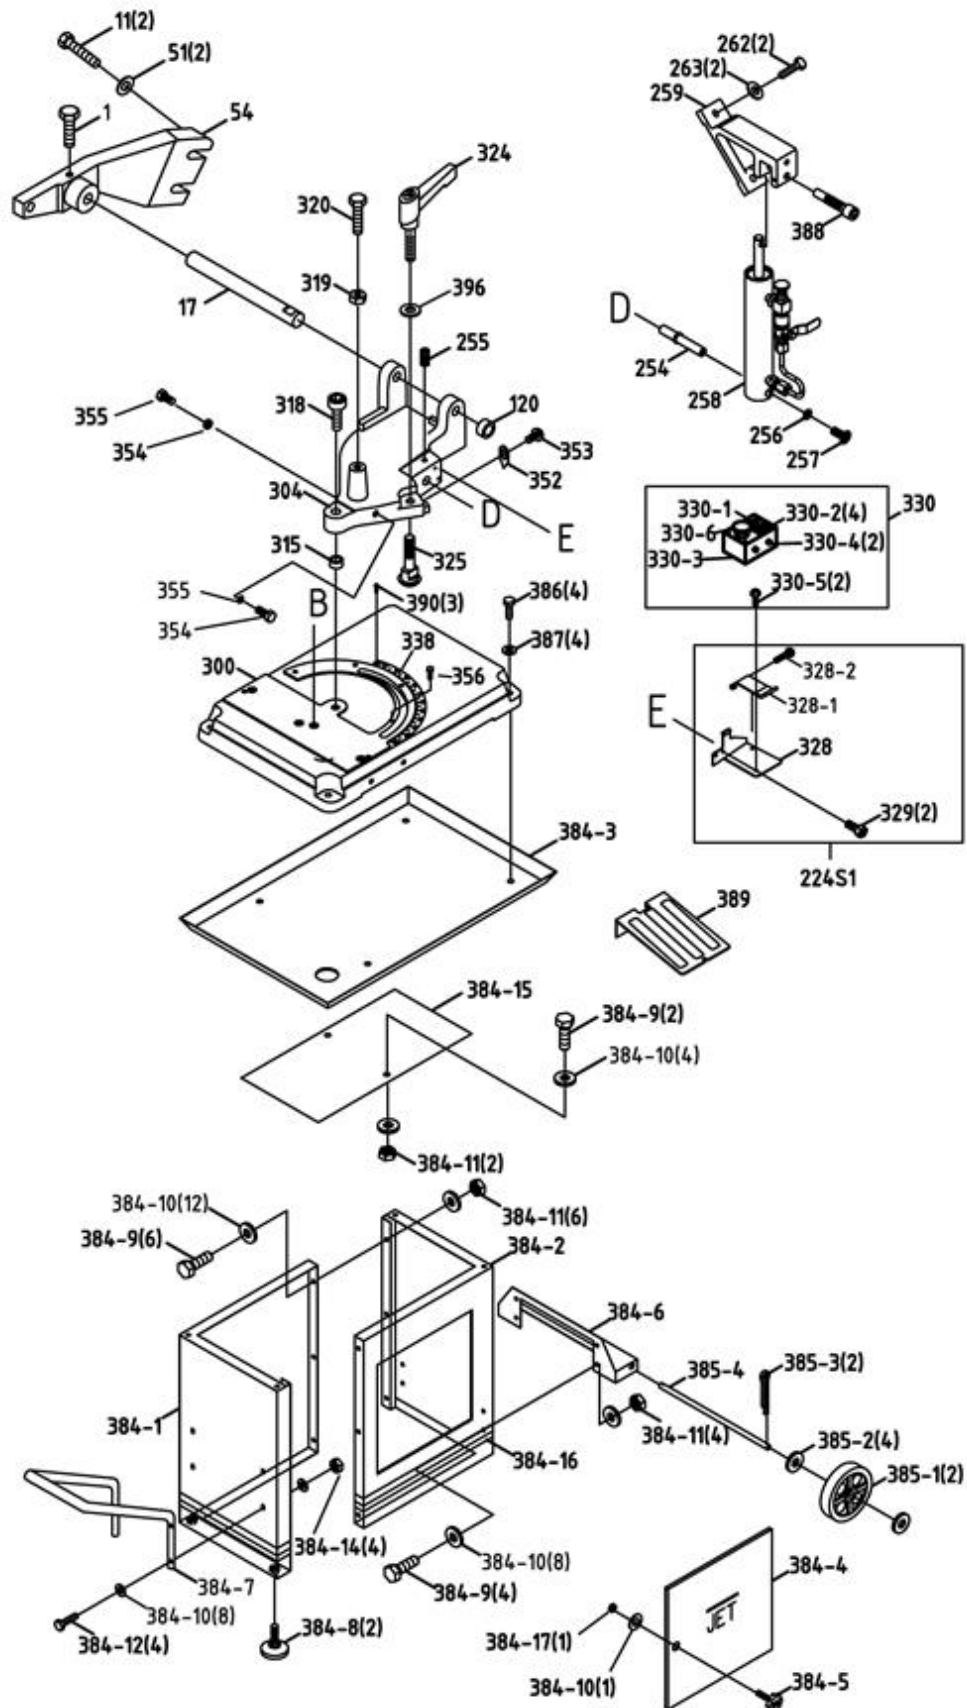

Parts List for the MBS-56CS Bandsaw

Index No.	Part No.	Description	Size	Qty.
1.....	TS-0051031.....	Hex Cap Bolt.....	5/16"x3/4".....	4
2.....	TS-0561011.....	Hex Nut.....	1/4".....	1
3.....	TS-0680021.....	Flat Washer.....	1/4".....	4
8.....	TS-0680031.....	Flat Washer.....	5/16".....	11
11.....	TS-0051051.....	Hex Cap Bolt.....	5/16"x1".....	4
12.....	TS-0561021.....	Hex Nut.....	5/16".....	4
16.....	HVBS462-016.....	Electric Cord.....		1
17.....	HVBS462-017.....	Pivoting Rod.....		1
19.....	HVBS462-019.....	Stock Stop.....		1
20.....	TS-0270021.....	Socket Set Screw.....	5/16"x5/16".....	4
21.....	HVBS462-021.....	Stock Stop Rod.....		1
24.....	TS-0561021.....	Hex Nut.....	5/16".....	1
25.....	TS-0051031.....	Hex Cap Bolt.....	5/16"x3/4".....	1
26.....	HVBS56M-026E.....	Plum Knob.....		1
27.....	HVBS462-027.....	Wheel Handle.....		1
28.....	HVBS462-028.....	Hand Wheel.....		1
31.....	HVBS56M-031.....	Screw.....	5/16"x1".....	1
35.....	TS-0680041.....	Flat Washer.....	3/8"x1".....	3
44.....	HB56M-044.....	Electric Cable.....		1
50.....	TS-0081031.....	Hex Cap Bolt.....	5/16"x3/4".....	3
51.....	TS-0680031.....	Flat Washer.....	5/16".....	3
54.....	MBSS56CS-054E.....	Pivot Bracket.....		1
57.....	HVBS56M-057.....	Adjustable Bracket LH.....		1
57A.....	HVBS56M-057A.....	Adjustable Bracket Assembly LH.....		1
58.....	HVBS462-058.....	Knob.....	1/4".....	1
60.....	HVBS462-060.....	C-Clip.....	S10.....	4
61.....	BB-6000ZZ.....	Ball Bearing.....	6000ZZ.....	6
62.....	HVBS462-062.....	Guide Pivot.....		2
62A.....	HVBS462-062A.....	Center Shaft Assembly (Includes: #60-62).....		1
62-1.....	HVBS462-062-1.....	Centrifugal Guide Pivot.....		2
62-1A.....	HVBS462-062-1A.....	Eccentric Shaft Assembly (Includes: #60,61,62-1).....		1
63.....	HVBS462-063.....	Bearing Shaft Pin.....		2
64-1.....	HVBS462-064-1.....	Blade Seat Left.....		1
64-2.....	HVBS462-064-2.....	Blade Seat Right.....		1
65.....	HVBS56M-065.....	Adjustable Bracket RH.....		1
65A.....	HVBS56M-065A.....	Adjustable Bracket Assembly RH.....		1
66.....	HVBS56M-066.....	Lock Knob.....		1
68.....	TS-0813021.....	Flat Head Machine Screw.....	1/4"x3/8".....	2
69.....	HVBS462-069.....	Deflector Plate.....		1
70.....	TS-0561031.....	Hex Nut.....	3/8".....	4
71.....	HVBS462-071.....	Blade Wheel Drive.....		1
72.....	HVBS462-072.....	Bearing Cover.....		2
73.....	HVBS462-073.....	Key.....	5x5x25.....	3
74.....	HVBS56M-060.....	C-Clip.....	S15.....	1
75.....	HVBS462-075.....	Hex Cap Bolt (w/Washer).....	1/4"x1/2".....	6
77.....	HVBS462-077.....	Idle Blade Wheel.....		1
78.....	TS-0680031.....	Flat Washer.....	5/16".....	2
79.....	HVBS462-079.....	Blade Tension Knob.....	3/8".....	1
80.....	HVBS462-080.....	Spring.....		1
81.....	HVBS56M-081.....	Saw Bow.....		1
.....	HVBS56M-081G.....	Saw Bow(gray color).....		1
83.....	TS-0070031.....	Cap Screw.....	1/2"x1-1/2".....	2
84.....	HVBS56M-084.....	Motor Mount Plate.....		1
84-1.....	HVBS56M-084-1.....	Tension Bracket.....		1

Index No.	Part No.	Description	Size	Qty.
85	HVBS463-085E	Motor	1/2HP/1ph/230V	1
	HVBS56M-085OLE	Overload Protection	4A	1
	HVBS56M-085CE	Capacitor Cover (not shown)		1
	HVBS56M-085CAE	Capacitor (not shown)	200MFD,125VAC	1
	HVBS56M-085FE	Fan (not Shown)		1
	HVBS56M-085FCE	Fan Cover (not shown)		1
86	HVBS462-086	Motor Pulley		1
87	BB-6202ZZ	Ball Bearing	6202ZZ	6
88	HVBS462-088	Bearing Bushing		1
89	OS-15375	Oil Seal		2
90	HVBS462-090	Transmission Wheel Shaft		1
91	HVBS462-091	Worm Gear		1
92	HVBS462-092	Gear Box Gasket		1
93	HVBS462-093	Gear Box Cover		1
	HVBS462-093G	Gear Box Cover(gray color)		1
94	HVBS462-094	Worm Gear (w/Shaft)		1
95	HVBS462-095	Spring Pin		1
96	HVBS462-096	Bearing Bushing		1
97	TS-0050011	Hex Cap Bolt	1/4"x1/2"	2
97-1	HBS56S-97-1	Washer	1/4"	2
99	HVBS462-099	Spacer		1
100	HVBS462-100	Flat Cross Head Screw	5/32"x3/8"	8
101	HVBS462-101	Worm Gear Pulley		1
102	TS-0720081	Lock Washer	5/16"	2
103	HVBS462-103	Blade Tension Sliding Plate		1
104	TS-0270051	Socket Set Screw	5/16"x1/2"	2
105	HVBS462-105	Spring Pin		1
106	HVBS462-106	Sliding Plate Draw Block		1
107	HVBS462-107	Blade Wheel Shaft		1
108	HVBS462-108	Shaft Block		1
109	HVBS462-109	Blade Tension Sliding Guide		2
110	HVBS462-110	Motor Pulley Cover Assembly		1
112	VB-A22	V-Belt	A22	1
113	414301	Blade		1
114	TS-0680041	Flat Washer	3/8"	4
117	TS-0090061	Hex Screw	3/8"x1-1/4"	1
120	HVBS462-120	Bushing		2
123	TS-0050031	Cap Screw	1/4"x3/4"	1
124	HVBS463-124	Machine Screw	3/16"x3/4"	1
125	TS-0051031	Hex Cap Bolt	5/16"x3/4"	1
126	HVBS462-126	Bushing		1
132	HVBS462-132	Blade Guard-Right		1
132-1	HVBS462-132A	Blade Guard-Left		1
159-1	HBS56S-159-1	Nut		1
141	TS-0561021	Hex. Nut	5/16"	1
142	HBS56S-142	Switch Cut Off Trip (Ser No.13022310 and lower)(not show)		1
142	MBS56S-142N	Switch Cut Off Trip (Ser No.13032311 and higher)		1
143	TS-0050011	Hex Cap Screw	1/4"x1/2"L	1
144	TS-0813021	Flat Head Screw (Ser No.13022310 and lower)(not show)		1
144	MBS56S-144N	Carriage Bolts (Ser No.13032311 and higher)	5/16"x1-1/4"	1
145	TS-0813021	Flat Head Machine Screw	1/4"x3/8"	1
254	HBS56S-254	Support Rod		1
255	TS-0267032	Socket Set Screw	1/4"x5/16"	1
256	TS-0680011	Flat Washer	3/16"	1
257	HBS56S-257	Hex Cap Bolt	3/16"x3/8"	1
258	HBS56S-258	Cylinder Assembly		1

Index No.	Part No.	Description	Size	Qty.
259	HB556S-259	Cylinder Upper Support		1
262	TS-0050051	Hex Cap Bolt	1/4"x1"	2
263	TS-0720071	Spring Washer	1/4"	2
300	HB556S-300	Stand Top		1
	HB556S-300G	Stand Top(gray color)		1
301	HB556S-301	Working table		1
	HB556S-301G	Working table(gray color)		1
303	HB556S-303	Wall plate		1
304	HB556S-304	Swivel Base(Upper)		1
	HB556S-304G	Swivel Base(Upper) gray color		1
307	HB556S-307	Acme Screw		1
308	HB556S-308	Bushing		2
309	TS-0680011	Flat Washer	3/16"	2
310	TS-0208081	Hex. Socket Head Screw	5/16"x1-1/2"	2
311	TS-0081031	Hex Cap Bolt	5/16"x3/4"	3
312	TS-0680032	Flat Washer	5/16"	5
313	TS-0208071	Hex. Socket Head Screw	5/16"x1-1/4"	2
314	TS-0267041	Set Screw	1/4"x3/8"	2
315	HB556S-315	Positioning Ring		1
316	TS-0561011	Hex Nut	1/2"	1
318	TS-0070071	Hex Cap Bolt	1/2"x2 1/2"L	1
319	TS-0561031	Hex Nut	3/8"	1
320	TS-0070071	Hex Cap Bolt	1/2"x2-1/2"	1
324	HB556S-324	Handle		1
325	HB556S-325	Carriage Screw	3/8"	1
328	HB556S-328	Switch Base (Ser No.13022310 and lower)(not show)		1
328	MBS556S-328N	Switch Base (Ser No.13032311 and higher)		1
329	HB556S-329	Cross Round Head Screw	3/16"x3/8"	2
330	HB556S-330	Switch (Ser No.13022310 and lower)(not show)		1
330	MBS556S-330N	Switch (Ser No.13032311 and higher)		1
330-1	HB556S-330-1	ON/OFF Switch		1
330-2	HB556S-330-2	Screw		4
330-3	HB556S-330-3	Electrical Box		1
330-4	HB556S-330-4	Cable Connector		2
330-5	HB556S-330-5	Screw		2
330-6	MBS556S-330-6	Emergency Stop Switch (Ser No.13032311 and higher)		1
338	HB556S-338	Scale		1
350	TS-0570011	Hex Nut	1/4"	4
351	TS-0050031	Hex Cap Bolt	1/4"x3/4"	4
352	HB556S-352	Scale		1
353	HB556S-353	Cross Round Head Screw	3/16"x1/2"	1
354	TS-0050051	Hex Cap Bolt	1/4"x1"	2
355	TS-0570011	Hex. Nut	1/4"	2
356	HB556S-356	Hex Cap Bolt	5/16"x1"	1
379	HVBS462-379	Cross Round Head Screw	1/4"-20x3/8"	2
380	HVBS56M-380	Blade Back Safety Cover		1
382	HB556S-382	Movable vise plate		1
383	HB556S-383	Bracket		1
384	HB556S-384	Stand Complete Assembly		1
384-1	HB556S-384-1	Side Plate(left)		1
	HB556S-384-1G	Side Plate(left) gray color		1
384-2	HB556S-384-2	Side Plate(Right)		1
	HB556S-384-2G	Side Plate(Right) gray color		1
384-3	HB556S-384-3	Chip Pan		1
	HB556S-384-3G	Chip Pan(gray color)		1

384-4...	HBS56S-384-4.....	Front Door	1
.....	HBS56S-384-4G	Front Door(gray color).....	1
384-5...	HBS56S-384-5.....	Knob	1
384-6...	HBS56S-384-6.....	Wheel Base	1
.....	HBS56S-384-6G	Wheel Base(gray color).....	1
384-7...	HBS56S-384-7.....	Hand Rod	1
384-8...	HBS56S-384-8.....	Rubber Head Screw.....	2
384-9...	TS-0051081.....	Hex. Head Screw.....	5/16" -18x3/4" 12

Index No.	Part No.	Description	Size	Qty.
384-10.	HBS56S-384-10.....	Flat Washer	5/16"x23xt2mm.....	24
384-11.	HBS56S384-11	Hex.Nut.....	5/16"-18.....	12
384-12.	TS-0051071.....	Hex.Head Screw.....	5/16"-18x1-1/2".....	4
384-13.	TS-0680031.....	Flat Washer	5/16" x 23xt2mm.....	8
384-14.	TS-0561021.....	Hex .Nut.....	5/16"-18.....	4
384-15.	HBS56S-384-15.....	Plate		1
.....	HBS56S-384-15G	Plate(gray color).....		1
384-16.	HBS56S-384-16.....	Color Strip.....		1
385.....	HBS56S-385.....	Wheel Complete Assembly		1
385-1...	HBS56S-385-1.....	Wheel		1
385-2...	HBS56S-385-2.....	Flat Washer	5/8"x30xt3	4
385-3...	HBS56S-385-3.....	Pin.....	3x25	2
385-4...	HBS56S-385-4.....	Wheel Rod.....		1
386.....	TS-0060061.....	Hex Head Screw.....	3/8"-16x1-1/4".....	4
387.....	TS-0680041.....	Flat Washer	3/8"x20xt2	4
388.....	HBS56S-388.....	Cap Screw		1
389.....	HBS56S-389.....	Protect Plate		1
390.....	HBS56S-390.....	Rivet	Ø2x5.....	3
392.....	TS-081C022	Cross Round Head Screw.....	3/16" -24x3/8"	1
393.....	HBS56S-393.....	Wire Ring.....		1
394.....	TS-081C032	Cross Round Head Screw.....	3/16"-24x1/2"	1
395.....	HBS56S-395.....	Hex. Nut.....	3/16".....	1

MBS-56CS 50000320M

230/50/1

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	interprétation
M	motor	Motor	Moteur
S	Switch	Schalter	Interrupteur
SB	Emergency Stop Switch	Not-Aus-Schalter	d'arrêt d'urgence
C	condenser	Kondensator	condensateur
E	electronic unit	Elektronik Einheit	unité électronique
F	fuse	Sicherung	fusible
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche
CS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
FR	overload cut-off	Überlastschuttschalter	déclencheur surcharge
LS	limit switch	Positionsendschalter	micro

